

DETECTO®



Digital Clinical Scale Owner's Manual



Model apex-sh
With Sonar Height Rod



Model apex
With Inline Height Rod

INTRODUCTION

Thank you for purchasing our DETECTO apex® Digital Clinical Scale. It has been manufactured with quality and reliability and has been tested before leaving our factory to ensure accuracy and dependability for years to come.

This manual is provided to guide you through the installation and operation of your scale. Please read it thoroughly before installing or operating your scale and keep it available for future reference.

This manual is for use with the following apex® Digital Clinical Scale models:

APEX-AC	APEX-LXI-AC	APEX-SH-AC	APEX-SH-C-ACMUK
APEX-ACUK	APEX-LXI-ACUK	APEX-SH-ACUK	APEX-SH-C-ACEU
APEX-C-AC	APEX-UWA-AC	APEX-SH-C-AC	APEX-SH-LXI-AC
APEX-C-ACUK	APEXH-AC	APEX-SH-C-ACUK	APEX-SH-S2E1-ACMUK
APEX-EU-AC	APEXH-SH-AC	APEX-SH-EU-AC	APEX-SH-UWA-AC

COPYRIGHT

All rights reserved. Reproduction or use, without express written permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

DISCLAIMER

While every precaution has been taken in the preparation of this manual, the Seller assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein. All instructions and diagrams have been checked for accuracy and ease of application; however, success and safety in working with tools depend primarily upon individual accuracy, skill, and caution. For this reason, the Seller cannot guarantee the result of any procedure contained herein. Nor can they assume responsibility for any damage to property or injury to persons occasioned from the procedures. Persons engaging in the procedures do so entirely at their own risk.

FCC COMPLIANCE STATEMENT

This equipment generates, uses, and can radiate radio frequency, and if not installed and used in accordance with the instruction manual, it may cause interference to radio communications. It has been designed within limits for a Class A computing device pursuant to Subpart J of Part 15 of the FCC rules to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area may cause interference, in which case the user will be responsible for taking whatever measures are necessary to correct the interference.

You may find the booklet "How to Identify and Resolve Radio-TV Interference Problems" prepared by the Federal Communications Commission helpful. It is available from the U.S. Government Printing Office, Washington, D.C. 20402. Request stock No. 001-000-00315-4.

Serial Number _____
Date of Purchase _____
Purchased From _____ _____ _____ _____
RETAIN THIS INFORMATION FOR FUTURE USE

<h2>PRECAUTIONS</h2> <p>Before using this scale, read this manual and pay special attention to all "NOTIFICATION" symbols:</p>	
 IMPORTANT	 ELECTRICAL WARNING

PROPER DISPOSAL

When this device reaches the end of its useful life, it must be properly disposed of. It must not be disposed of as unsorted municipal waste. Within the European Union, this device should be returned to the distributor from where it was purchased for proper disposal. This is in accordance with EU Directive 2002/96/EC. Within North America, the device should be disposed of in accordance with the local laws regarding the disposal of waste electrical and electronic equipment.

It is everyone's responsibility to help maintain the environment and to reduce the effects of hazardous substances contained in electrical and electronic equipment on human health. Please do your part by making certain that this device is properly disposed of. The symbol shown to the right indicates that this device must not be disposed of in unsorted municipal waste programs.



CAUTION




CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

ATTENTION: RISQUE D'EXPLOSION SI LA BATTERIES EST REMPLACE'E PAR UN TYPE INCORRECT. REJETEZ LES BATTERIES UTILISE'ES SELON LES INSTRUCTIONS.

TRANSPORTATION AND STORAGE




Do Not Drop

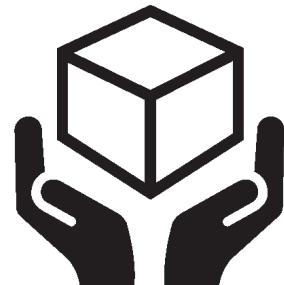

Handle with Care



Keep Dry

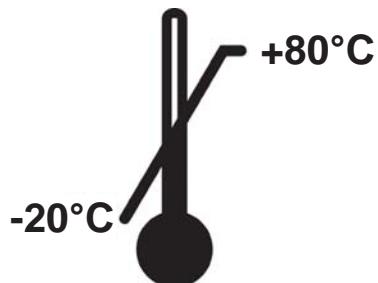

Temperature Range

TABLE OF CONTENTS

SPECIFICATIONS	Page 1
Standard Features	Page 1
Optional Features	Page 1
SITE PREPARATION REQUIREMENTS	Page 2
UNPACKING	Page 3
APEX (with Inline Height Rod) ASSEMBLY	Page 3
APEX-SH (with sonar height rod) ASSEMBLY	Page 6
APEXH (with Handrail) ASSEMBLY	Page 9
WEIGHING UNITS SELECTION	Page 11
INTERCONNECTIONS	Page 13
AC Power Adapter	Page 13
USB	Page 13
RS232 COM Port	Page 13
BATTERIES	Page 14
Battery Status	Page 14
Battery Saver Feature	Page 14
Battery Installation/Replacement	Page 15
KEYPAD FUNCTIONS	Page 16
ANNUNCIATORS	Page 18
APEX (with Inline Height Rod) OPERATION	Page 19
Zero Weight Display	Page 19
Basic Operation	Page 19
Body Mass Index (BMI) Operation	Page 19
INLINE HEIGHT ROD OPERATION	Page 20
APEX-SH (with sonar height rod) OPERATION	Page 21
Zero Weight Display	Page 21
Basic Operation	Page 21
Body Mass Index (BMI) Operation, Using Sonar Height	Page 21
Body Mass Index (BMI) Operation, Using Previously Measured Height	Page 22
MOTHER/BABY WEIGHING	Page 23
SCALE SETUP	Page 24
<i>HEC</i> (Sonar Height Rod Calibration)	Page 29
DATA FORMAT	Page 32
PRINTER OUTPUT FORMATS	Page 33
EVENT COUNTER	Page 34
ERROR AND OPERATION MESSAGES	Page 35
BEFORE YOU CALL SERVICE	Page 35
CARE AND CLEANING	Page 36
PARTS IDENTIFICATION	Page 37
APEX (with Inline Height Rod)	Page 37
APEX-SH (with sonar height rod)	Page 39
PC Serial Cable / P150 Printer Cable	Page 43
Base Sub-Assembly	Page 44
APEXH Final Assembly	Page 46

SPECIFICATIONS

Models:	apex-AC models with Inline Height Rod	apex-sh-AC models with Sonar Height Rod
Height Rod Type:	Inline Height Rod	Sonar Height Rod
Height Rod Measures:	24" (2') – 86" (7'2") x 0.125 in (60 cm – 218 cm) x 0.1 cm	24" (2') – 80" (6' 8") x 0.2 in (60 cm – 203 cm) x 0.5 cm
Capacity:	600 lb x 0.1 lb (270 kg x 0.05 kg)	
Weighing/Height Units:	Pounds/Inch (lb, in) or Kilograms/Centimeters (kg, cm)	
Platform Size:	17 in W x 17 in D x 2.75 in H (43 cm W x 43 cm D x 7 cm H)	
apex® Overall Dimensions:	17 in W x 19.5 in D x 53.3 in H (43 cm W x 49.5 cm D x 135.3 cm H)	
apex®-sh Overall Dimensions:	17 in W x 19.5 in D x 89.5 in H (43 cm W x 49.5 cm D x 227.3 cm H)	
Display Type:	Dual Row Seven Segment LCD	
Number of Characters:	Weight: 5 digits, 0.75 in (19 mm) high Height/BMI: 4 digits, 0.4 in (10 mm) high	
Keys:	Mechanical switch type, Power, Lock/Release, Zero, Up Arrow, Down Arrow/Send, BMI/Enter	
Power Requirements:	<p>Domestic: Included 100 to 240 VAC 12 VDC 1A Wall Mount UL/CE Approved adapter with US (Type B) input plug (Cardinal part number 6800-1045)</p> <p>International: Included 100 to 240 VAC 12 VDC 1A Wall Mount Multi-Blade UL/CE Approved adapter with EU (Type C) and UK (Type G) input plugs (Cardinal part number 6800-1047)</p> <p>Batteries (not included) 12 AA cell Alkaline, Ni-Cad, or NiMH</p>	
Operating Environment:	Operated Temperature Range: 14 to 104 °F (-10 to +40 °C) Humidity: 0 to 90% non-condensing	
Storage Environment:	Storage Temperature Range: -4 to 176 °F (-20 to +80 °C) Humidity: 0 to 95%	
Communication Interfaces:	USB, RS232	
Certifications:	NTEP – Certificate of Conformance No. 21-079 OIML R-76 – EU Type Approval Certificate No. DK0199.558	
OIML Class III Compliant:	These models are also available as OIML Class III compliant by adding the -KGEU suffix to the model number when ordering. Capacity: 290 kg x 0.1 kg.	

Standard Features:

- Power-Up Zero
- Auto Weight Lock Feature
- StableSENSE®¹ Adjustable Filtering
- Wi-Fi / Bluetooth - Available on connected apex (-C) models
- 1 RS232 Serial Port
- 1 Micro-B USB Port
- Sonar Height Rod (apex-sh models)

Optional Features:

- Battery Operation (*Batteries not included*)
- WAConnect, Welch Allyn® Interface

¹ StableSENSE® is a digital filter utilizing a proprietary software algorithm that removes or greatly reduces changes in the weight display resulting from movement on the scale platform. When used with clinical scales, it will lessen the effects of the patient's movement or vibration on the scale.

SITE PREPARATION REQUIREMENTS

The apex® Digital Clinical Scale is a precision weight indicating instrument. As with any precision instrument, it requires an acceptable environment to operate at peak performance and reliability. This section is provided to assist you in obtaining such an environment.

Environmental

- For indoor use only.
- Suitable for dry environments only, RH < 90% and non-condensing environments.
- NEVER allow the scale to get wet.
- The scale meets or exceeds all certification requirements within a temperature range of 14 to 104 °F (-10 to +40 °C).
- The scale should be placed on a flat, level floor or low-cut carpet.
- The scale should be placed out of direct sunlight and to provide adequate air circulation, keep the area around the scale clear.
- Do not place the scale in front of a heating or cooling vent. Such a location will subject it to sudden temperature changes, which may result in unstable weight readings.

Electrical Power

The apex® Digital Clinical Scale has been designed to operate from a 100 to 240 VAC 12 VDC 1 A Wall Mount AC Power Adapter.

- The socket outlet supplying power to the scale should be near the scale and should be easily accessible.
- Make certain the AC power adapter cord is out of the way of normal traffic to avoid a trip hazard.
- When using the AC power adapter, ensure the scale has good, clean AC power and is properly grounded. In areas subject to lightning strikes, additional protection to minimize lightning damage, such as surge suppressors, should be installed.
- On installations requiring 230 VAC power, **it is the responsibility of the customer** to have a qualified electrician install the proper power adapter plug that conforms to national electrical codes and local codes, and ordinances.

Electrical Noise Interference

To prevent electrical noise interference, make certain all air conditioning and heating equipment, lighting, or other equipment with heavily inductive loads, such as motors and solenoids, are on circuits separate from the system. These sources of disturbances must be identified, and steps must be taken to prevent possible adverse effects on the scale. For example, using simple line filters, isolation transformers, power regulators, or uninterruptible power supplies.

UNPACKING

Carefully remove the apex® Digital Clinical Scale from the shipping carton and inspect it for any damage that may have taken place during shipment. *Keep and use the original carton and packing material for return shipment if it should become necessary.* The purchaser is responsible for filing all claims for any damages or loss incurred during transit. Remove all plastic wrapping, foam fillers, and cardboard material from the scale platform, display, and other components. You should have the following components:

apex®-AC (with Inline Height Rod)

- ① Column with attached Display
- ② Scale Base
- ③ Scale Base Cover
- ④ AC Power Adapter

apex®-sh-AC (with sonar height rod)

- ① Column with attached Display and Sonar Bracket
- ② Column Cover
- ③ Scale Base
- ④ Scale Base Cover
- ⑤ Sonar Height Rod
- ⑥ AC Power Adapter

APEX (with Inline Height Rod) ASSEMBLY


TOOLS REQUIRED:

3/16" Allen wrench (included with scale)

1. Place the scale base on a level floor.
2. Locate the scale base cable and pull it out of the base and under the wheel's axle.
3. Install the column cover onto the column.



Step 1

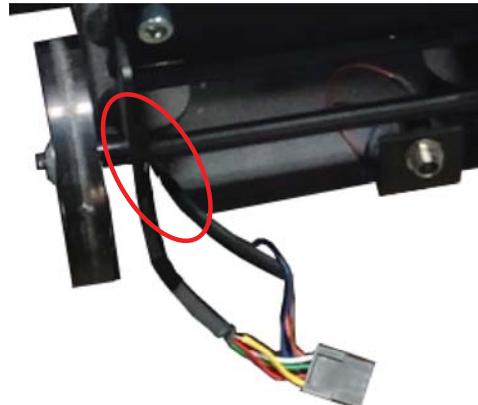


Step 2



Step 3

4. Position the column over the opening in the scale base and then insert the column into the scale base, making sure the cable from the column goes out of the scale base and under the axle for the wheels.
5. With both cables coming out of the scale base under the axle, align the wire connector from the column cable with the wire connector from the scale base cable, and then plug them together.

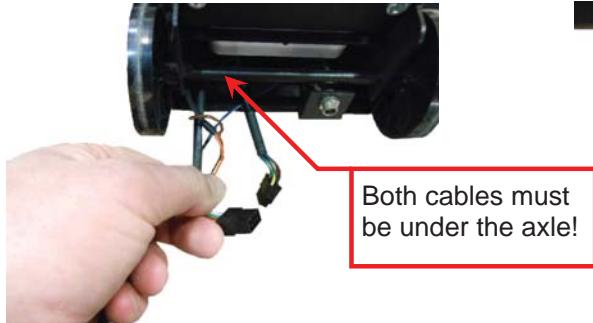

Step 4



Step 5

6. Making sure the column is completely down in the scale base and against the back plate, tuck the connected cables into the scale base under the axle.



Step 6

7. Using the 3/16" Allen wrench, *evenly* tighten the (4) Allen head screws on the back of the scale base to secure the column to the scale base.



NOTE: The nuts on the front of the column opening in the scale base may turn as you are tightening the Allen head screws.

This is normal. DO NOT use a wrench or other tool to hold the nut to keep it from turning!



Step 7

8. Slide the column cover down onto the base. Note that you may have to pull the cover out slightly to clear the AC power jack.
9. Place the scale base cover on the scale base and press down on both sides of the cover. Note that a clicking sound will occur when the cover is snapped in place.



Step 8



Step 9

10. The scale is now ready for operation.



NOTE: For instructions on powering the scale using the AC power adapter or for instructions on how to install batteries, refer to the INTERCONNECTIONS and BATTERIES sections of this manual.

APEX-SH (with Sonar Height Rod) ASSEMBLY


TOOLS REQUIRED:

3/16" Allen wrench (included with scale)

1. Place the scale base on a level floor.
2. Locate the scale base cable and pull it out of the base and under the wheel's axle.
3. Install the column cover onto the column.



Step 1

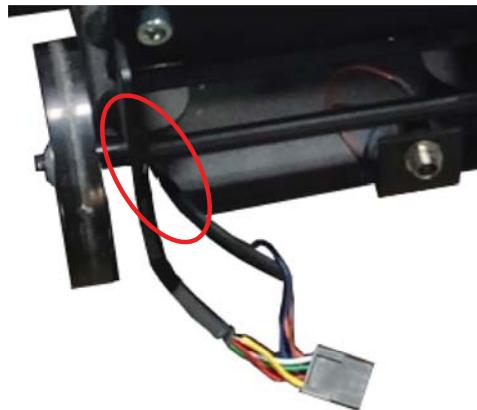


Step 2



Step 3

4. Position the column over the opening in the scale base and then insert the column into the scale base, making sure the cable from the column goes out of the scale base and under the axle for the wheels.
5. With both cables coming out of the scale base under the axle, align the wire connector from the column cable with the wire connector from the scale base cable, and then plug them together.

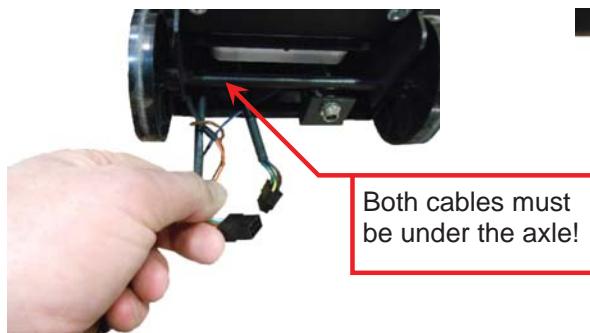

Step 4



Step 5

6. Making sure the column is completely down in the scale base and against the back plate, tuck the connected cables into the scale base under the axle.



Step 6

- Using the 3/16" Allen wrench, evenly tighten the (4) Allen head screws on the back of the scale base to secure the column to the scale base.



NOTE: The nuts on the front of the column opening in the scale base may turn as you are tightening the Allen head screws.

This is normal. DO NOT use a wrench or other tool to hold the nut to keep it from turning!



Step 7

- Slide the column cover down onto the base. Note that you may have to pull the cover out slightly to clear the AC power jack.
- Place the scale base cover on the scale base and press down on both sides of the cover. Note that a clicking sound will occur when the cover is snapped in place.



Step 8



Step 9

- Remove the sonar bracket by pushing up from the bottom of the bracket (see Step 10a) until the screws are aligned with the large end of the slotted holes (see Step 10b) in the bracket and pull it away from the column. Set the sonar bracket aside.
- Align the wire connector from the end of the Sonar tube with the wire connector from the back of the column and plug them together.



Step 10a



Step 10b




Step 11

12. Place the bracket over the sonar tube, making sure the tube is completely down in the bracket.
13. Next, insert the cable and connector into the hole on the back of the column.
14. Aligning the large end of the slotted holes in the bracket with the screws in the column (see Step 12 and Step 13), place the sonar tube on the back of the column and pull down to secure the sonar bracket to the column.



Steps 12 and 13

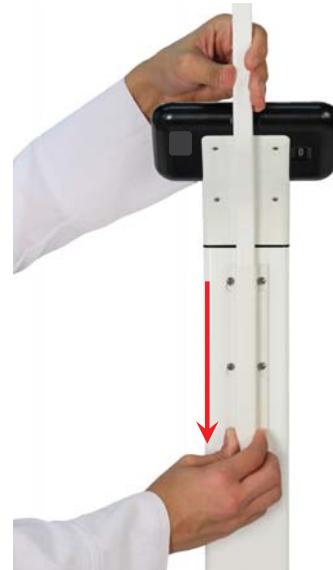

Step 14

15. The scale is now ready for operation.



NOTE: For instructions on powering the scale using the AC power adapter or for instructions on how to install batteries, refer to the INTERCONNECTIONS and BATTERIES sections of this manual.

APEXH (with Handrail) ASSEMBLY

TOOLS REQUIRED:

- 3/16" Allen wrench (included with scale)
- 7/16" Wrench (open end, box end, or combination)

INCLUDED HARDWARE:

Qty.	Part Number	Description
6	6007-4540	1/4-20 X 1-1/2 HEX, ZINC, BUTTON CAP SCREW
2	6024-0039	WASHER, LOCK, HELICAL, SP, 1/4" REG, Z-PL
2	6013-0420	NUT, 1/4-20 HEX, ACORN, Z/P
4	6013-0051	NUT, 1/4-20 HEX, LOCKNUT, Z/P



1. Place the scale base on a level floor, then position the handrail onto the two supports located on either side of the wheels.




Step 1

2. Align the holes in the handrail mounting bracket with the holes in the scale base supports. Install three 1/4-20 x 1 1/2 button cap screws, two from the top and one from the side, as shown in Step 2. Repeat this process for the other side of the handrail mount.



Step 2

3. Referring to the Step 3 image, install the lock washer and 1/4-20 acorn nut onto the side screw of the bracket. Then install the 1/4-20 locknuts onto the two screws through the top of the bracket. Hand-tighten all nuts, and repeat the process for the opposite side of the handrail mount.

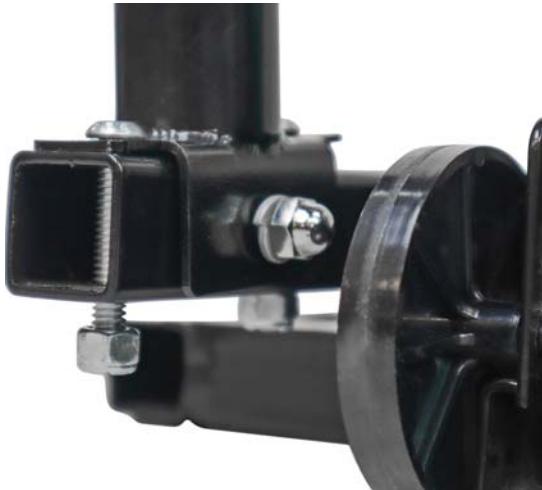

Step 3

4. Referring to the Step 4 image, use the 3/16 Allen wrench and a 7/16 wrench to securely tighten both acorn nuts and all four locknuts.




Step 4

5. To complete the assembly of your APEXH-AC or APEX-SH-AC scale, refer to the previous sections titled "APEX (with Inline Height Rod) ASSEMBLY" or "APEX-SH (with Sonar Height Rod) ASSEMBLY", as appropriate.

WEIGHING UNITS SELECTION

NOTE: The following instructions apply to all models of the apex® Digital Clinical Scale, the apex with the Inline Height Rod, and the apex-sh with the Sonar Height Rod.

When the scale is turned on for the *first* time, it will display a prompt to select the weighing units to use for your operation: lb (pounds) or kg (kilograms). The weighing units selection can **ONLY** be made at this time and cannot be changed afterward. Make sure you select the correct weighing units before proceeding.

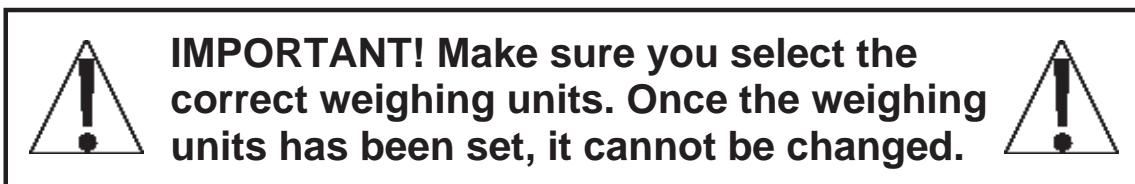

1. Press the key to turn the scale on.
2. A display test will be performed (all digits on the weight display will turn on), then change to show the software version for a few seconds, and finally, the display will change to show *SEL Un It* with the lb annunciator (factory units setting) turned on.
3. If the lb (pounds) units setting is acceptable, press the key to save it, and then proceed to step 5.
4. Otherwise, press the or keys to toggle the weighing units from lb (pounds) to kg (kilograms), and then press the key to save it.
5. The display will change to *0.0*, with the (ZERO), the (STABLE) and the kg annunciator will be turned on.
6. The scale is now ready for operation.

INTERCONNECTIONS

The input and output connections to the scale are made on the back of the weight display. The AC power adapter connection is located on the back of the scale base.

AC Power Adapter

To power the scale using the 12V DC wall plug-in UL/CSA listed Medical Grade AC power adapter, connect the plug from the adapter to the power jack on the back of the scale base, then plug the power adapter into the proper electrical outlet. On models requiring 230 VAC, it is the customer's responsibility to obtain a correct power adapter plug.



USB

The USB port on the scale is a device (or upstream) port and uses readily available cables with the industry standard "Micro-B" connector.

The USB port may be connected to a computer for transmission of weight and associated data to a PC-based EMR (electronic medical record) software program. The data can be transmitted on demand (pressing the Q key) or on receipt of a command from the computer.

RS232 COM Port

The scale has one RS232 serial port on the back of the display. This port may be used to request and capture weight, send basic commands, or get diagnostics from the load cell. To use the port, an apex to PC serial cable can be purchased from the Cardinal / DETECTO Parts Department at (800) 641-2045 or parts@cardet.com. The part number is **3300-0271-0A, APEX TO PC SERIAL CABLE**.

This port is also used to connect to the P150 Portable Ticket Printer using an apex to P150 printer cable that can be purchased from the Cardinal / DETECTO Parts Department at (800) 641-2045 or parts@cardet.com. The part number is **3300-0271-3A, APEX TO P150 DIRECT CABLE 2.0m**.



BATTERIES

The scale can use twelve AA-size Alkaline, Ni-Cad, or NiMH batteries (*not included*). You must first obtain and install batteries before operations can begin. Batteries are contained in two battery holders (six batteries in *each* holder) inside the scale base. Remove the scale platform cover to access the battery holders in the scale base.



NOTE: The scale can be operated from Alkaline, Ni-Cad, or NiMH batteries. All twelve batteries must be of the same type. They must all be Alkaline, all Ni-Cad, or all NiMH. **DO NOT** mix Alkaline and Ni-Cad or NiMH batteries.



CAUTION! The apex® scale *does not* have a battery charging circuit. Should you wish to use Ni-Cad or NiMH batteries, they must be *fully* charged before installing them. When discharged, the Ni-Cad or NiMH batteries must be removed and placed in an external charger to recharge.

Battery Status

The battery status will be displayed when batteries are installed. The battery bar graph on the display indicates the battery capacity in five steps:



- 4 segments - the full battery capacity is available,
- 3 segments - the battery is at 80% of capacity,
- 2 segments - the battery is at 60% of capacity,
- 1 segment: - the battery is at 40% capacity.
- 0 segments - the battery is at less than 20% capacity

When the battery voltage drops too low for accurate weighing, the scale display will show *L o* on the small upper seven-segment display and *BRt* on the large lower seven-segment display, and shut off. You will be unable to turn the scale back on until the batteries have been replaced.

Using Alkaline Batteries

When no bars are shown on the battery status symbol, press the **Power** key to turn the scale off, remove the old batteries, and replace them with new ones.

Using NiCad or NiMH Batteries

When no bars are shown on the battery status symbol, press the **Power** key to turn the scale off, remove the discharged batteries, and replace them with fully charged ones. Place the discharged batteries in an external charger to recharge.

Battery Saver Feature

This scale is equipped with a battery saver feature that helps prolong battery life by dimming the scale display backlight and turning the scale off when not in use.

Using Batteries

When using batteries, after one minute of inactivity (no motion on the scale and no keys pressed), the scale will automatically turn off. To turn the scale back on, you must press the **Power** key. The backlight on the scale display will be at 50% brilliance to conserve battery life.

Using the AC Power Adapter

When using the AC power adapter, the automatic shut-off feature is *disabled*, and the scale will remain on regardless of the length of time of inactivity. In addition, the backlight on the scale display will be at full brilliance.

Battery Installation/Replacement

To install or remove the batteries, the following steps should be followed:

1. Remove the platform cover from the scale base.
2. Referring to Figure No. 1, locate the two battery holders in the scale base.
3. If installing new batteries, proceed to step 4. If replacing the batteries, remove all twelve batteries (six in each holder) from the battery holders, and then proceed to step 4.
4. Referring to Figure No. 2, install the new twelve AA-size batteries (six in each holder), noting the polarity markings located in the battery holders.
5. After placing all twelve batteries (six in each holder), install the platform cover on the scale base and press the  key.



Figure No. 1



Figure No. 2

6. If the display turns on, the batteries have been installed correctly. If not, remove the platform cover and check for one or more improperly positioned batteries.
7. The scale is now ready for operation.

KEYPAD FUNCTIONS



DO NOT operate the keys with pointed objects (pencils, pens, etc.). Damage to keys resulting from this practice is **NOT** covered under warranty.




This is the **Power** key. With the scale off, pressing this key will apply power to the scale and turn on the display. If the scale is already on, pressing the key will turn it off.



This is the **Lock/Release** key. Press and release this key to cause the weight, height, and BMI to lock on the current values until the key is pressed again. While the scale display is locked, the annunciator resembling a padlock  will turn on to denote that the weight is being held.



This is the **Zero** key. Press and release this key to reset the display to zero. Note that when this key is pressed with weight on the scale platform, the display will zero the weight up to 100% of the scale capacity. When the weight is removed, the display will show a negative weight value. Press the  key again to reset the display to zero.

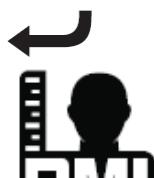

This is the **Enter/BMI** key. It is a multi-function key. First, during setup, pressing the  key will accept the currently displayed setting of the parameter. Second, the  key is used to signal the completion of the entry of data (in both setup and operation) and will cause the scale to process the data entered.



During operation, this is also the **BMI** key. It is used to input the patient's height and then perform the Body Mass Index (BMI) calculation. Note that the scale will not respond to pressing the key unless the weight is stable.

Pressing the key once allows the operator to enter a previously measured height of the patient using the  or  keys to increase or decrease to the correct height. After entering the patient's height, the display will show the Body Mass Index (BMI) calculation. After calculating the BMI, pressing this key will toggle between the patient's BMI and weight.

Note that once the patient is off the scale, the scale automatically returns to the weigh only operation mode.




This is the **MOTHER/BABY** key. It is used with the Mother/Baby Weighing feature to determine the weight of infants and toddlers held by an adult. This feature allows the adult to be weighed first, and then the adult and infant/child are weighed, with only the weight of the infant/child displayed.



(Up Arrow Key)

During operation, the \uparrow key is used when performing the Body Mass Index (BMI) calculation to increase the height value.

NOTE: When entering the height for BMI calculation, pressing and holding the up arrow key \uparrow key allows you to rapidly increase the height entry.

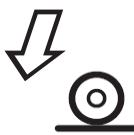

(Down Arrow/PRINT)

This is the **Down Arrow/PRINT** key. It serves two purposes. First, during operation, the \downarrow key is used when performing the Body Mass Index (BMI) calculation to decrease the height value. Note that when entering the height for BMI calculation, pressing and holding the down arrow \downarrow key allows you to rapidly decrease the height entry.

Second, this is the **PRINT** key. It is used to signal the completion of the data entry, process the data entered, and send the weight and associated data to the USB port, RS232 serial port, and Wi-Fi/Bluetooth on the models APEX-C and APEX-C-AC.




NOTE: The scale will not respond to pressing the \odot (Print) key unless the weight reading is stable and locked or the Lk (Lock/Release) key is pressed to hold the weight reading.

When the weight on the scale is stable, the weight reading will automatically lock, and the annunciator resembling a padlock  will turn on. The amount of time the reading will hold is dependent upon the *HOL d* setting in Setup. If more time is needed, press the Lk key to hold the locked weight reading. Note that the Lk key must be pressed again to unlock the weight reading.

ANNUNCIATORS

The annunciators are displayed on the Weight screen to show that the scale is in the mode corresponding to the annunciator label or that the status indicated by the label is active.

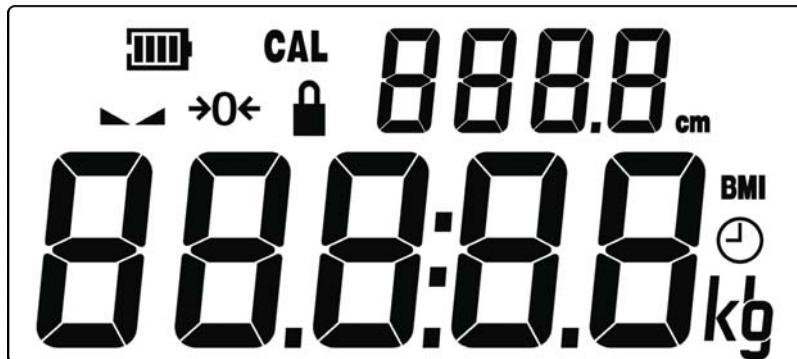

The low battery annunciator is located in the upper left corner of the display. It is used to indicate the battery status. Refer to the Battery section of this manual for more details.

CAL (Calibration)

This annunciator is turned on when the scale is in the Setup and Calibration mode.

▲ (STABLE)

This annunciator is turned on when the weight display is stable. When off, it means that the change in successive weight samples is greater than the motion limits selected during setup.

→0← (ZERO)

This annunciator is turned on to indicate that the weight displayed is within +/- 1/4 division of the center of zero.

LOCK

This annunciator is turned on to show that the indicator is locked onto the displayed weight. In operation, after obtaining a stable weight, pressing the key will cause the scale display to lock onto the weight and turn on the annunciator. Pressing the key again will unlock the display and turn off the annunciator.

BMI (Body Mass Index)

This annunciator is turned on when displaying the calculated body fat.

kg

This annunciator is turned on to indicate that the displayed weight is in kilograms.

lb

This annunciator is turned on to indicate that the displayed weight is in pounds.

cm

This annunciator is turned on when the displayed height measurement is in centimeters.

APEX (with Inline Height Rod) OPERATION



ALWAYS assist the patient in stepping on and off the scale platform to ensure they do not fall. **NEVER** leave a patient unattended while they are on the scale platform. Failure to maintain control of the patient at all times can result in severe injury to the patient and/or you.

Zero Weight Display

1. If the scale is not showing zero weight on the display, press $\Rightarrow 0 \Leftarrow$ key.
2. The Weight display will return to zero. The $\rightarrow 0 \Leftarrow$ (ZERO) and \blacktriangle (STABLE) annunciators will turn on to show a stable, center-of-zero weight condition.

Basic Weighing Operation

1. Press the \bigcirc key to turn the scale on.
2. If required, press $\Rightarrow 0 \Leftarrow$ key to zero weight display.
3. Assist the patient onto the scale.
4. When weight is stable, the \blacktriangle (STABLE) annunciator will turn on.
5. The weight reading will automatically lock, and the annunciator resembling a padlock \blacksquare will turn on. Note that the amount of time the reading will hold is dependent upon the $HOLD$ setting in Setup. Press the \blacksquare key if more time is needed to read the weight.
6. Read and record the weight displayed.
7. If a printer is connected to the scale, press the \odot key to print a ticket. **NOTE:** The weight reading must be locked (padlock \blacksquare turned on) or the \blacksquare key must be pressed to print a ticket. Note that the \blacksquare key must be pressed again to unlock the weight reading.
8. Assist patient off the scale.

Body Mass Index (BMI) Operation (Using Measurement from Inline Height Rod)

1. Press the \bigcirc key to turn the scale on.
2. If required, press $\Rightarrow 0 \Leftarrow$ key to zero weight display.
3. Assist patient onto the scale.
4. When weight is stable, the \blacktriangle (STABLE) annunciator will turn.
5. The weight reading will automatically lock, and the annunciator resembling a padlock \blacksquare will turn on. Note that the amount of time the reading will hold is dependent upon the $HOLD$ setting in Setup. Press the \blacksquare if more time is needed to read the weight.
6. Read and record the weight displayed.
7. Press the BMI key. The display will change to the default height, 66.2 inches (168.0 cm).
8. Press \uparrow or \downarrow keys to increment or decrement the previously measured patient's height. See INLINE HEIGHT ROD OPERATION for instructions on measuring the patient.
9. Press the BMI key. The display will change to show BMI (Body Mass Index).
10. Read and record the patient's BMI.


 

NOTE: While the patient is still standing on the scale, pressing the BMI key will toggle between the patient's BMI and weight.

11. If a printer is connected to the scale, ensure both height and weight are shown on the display, and then press the \odot key to print a ticket. **NOTE:** The weight reading must be locked (padlock \blacksquare turned on) or the \blacksquare key must be pressed to print a ticket. Note that the \blacksquare key must be pressed again to unlock the weight reading.
12. Assist patient off the scale.
13. Once the patient is off the scale, the display automatically returns to weight only mode.

INLINE HEIGHT ROD OPERATION


If the patient is 47" (120 cm) or taller:

1. Lift the spoon on the height rod to the horizontal position.
2. Referring to the illustration to the right, raise the spoon and inner height rod well above the estimated height of the patient's head.
3. Assist patient onto the scale.
4. While keeping the spoon horizontal, carefully lower the inner height rod (press down in the same area as used to lift it) until the spoon rests on top of the patient's head.
5. Read the height of the patient at the black edge on the outer column.
6. Referring to the figure, lift the spoon (while keeping it horizontal) and raise it above the patient's head.
7. Assist patient off the scale.
8. Lower the spoon back to the vertical position and return the height rod to the "stored" position (the spoon should be vertical against the outer column and the inner height rod should be flush with the top of the column).

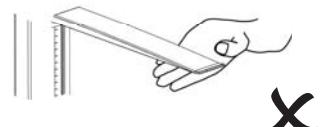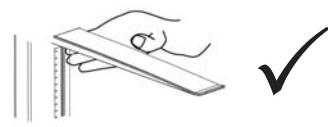

If the patient is shorter than 47" (120 cm):

1. Assist patient onto the scale.
2. Make sure the patient is looking straight ahead. Position the patient's head so that a horizontal line from the ear canal to the lower border of the eye socket runs parallel to the floor.
3. Make sure the measurer's eyes are at the same level as the patient's head.
4. Read the height of the patient on the outer column.
5. Assist patient off the scale.

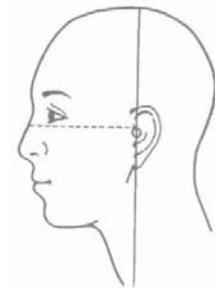

APEX-SH (with sonar height rod) OPERATION



ALWAYS assist the patient in stepping on and off the scale platform to ensure they do not fall. **NEVER** leave a patient unattended while they are on the scale platform. Failure to maintain control of the patient at all times can result in severe injury to the patient and/or you.

Zero Weight Display

1. If the scale is not showing zero weight on the display, press $\Rightarrow 0 \Leftarrow$ key.
2. The Weight display will return to zero. The $\rightarrow 0 \Leftarrow$ (ZERO) and $\blacksquare \blacksquare$ (STABLE) annunciators will turn on to show a stable, center-of-zero weight condition.

Basic Weighing Operation

1. Press the \textcircled{O} key to turn the scale on.
2. If required, press $\Rightarrow 0 \Leftarrow$ key to zero weight display.
3. Assist patient onto the scale
4. When weight is stable, the $\blacksquare \blacksquare$ (STABLE) annunciator will turn on.
5. The weight reading will automatically lock, and the annunciator resembling a padlock  will turn on. Note that the amount of time the reading will hold is dependent upon the $HOLD$ setting in Setup. Press the \textcircled{P} key if more time is needed to read the weight.
6. Read and record the weight displayed.
7. If a printer is connected to the scale, press the \textcircled{O} key to print a ticket. **NOTE:** The weight reading must be locked (padlock  turned on) or the \textcircled{P} key must be pressed to print a ticket. Note that the \textcircled{P} key must be pressed again to unlock the weight reading.
8. Assist patient off the scale.

Body Mass Index (BMI) Operation (Using Sonar Height Rod)

1. Press the \textcircled{O} key to turn the scale on.
2. If required, press $\Rightarrow 0 \Leftarrow$ key to zero weight display.
3. Assist patient onto the scale. *To obtain an accurate height measurement, instruct the patient to look straight ahead and not down at the scale display.*
4. When weight is stable, the $\blacksquare \blacksquare$ (STABLE) annunciator will turn.
5. The weight reading will automatically lock, and the annunciator resembling a padlock  will turn on. Note that the amount of time the reading will hold is dependent upon the $HOLD$ setting in Setup. Press the \textcircled{P} if more time is needed to read the weight.
6. The scale will have completed measuring the patient's height and calculating their BMI.
7. Read and record the weight displayed.
8. If a printer is connected to the scale, press the \textcircled{O} key to print a ticket. The scale will print a ticket with the Date, Time, Weight, Height, and BMI with units for weight and height.
NOTE: The weight reading must be locked (padlock  turned on) or the \textcircled{P} key must be pressed to print a ticket. Note that the \textcircled{P} key must be pressed again to unlock the weight reading.
9. Press the  key. The display will change to show the BMI (Body Mass Index).
10. Read and record the patient's BMI.

NOTE: While the patient is still standing on the scale, pressing the  key will toggle between the patient's BMI and weight.

11. Assist patient off the scale.
12. Once the patient is off the scale, the display automatically returns to weight only mode.

Body Mass Index (BMI) Operation (Using Previously Measured Height)

1. Press the  key to turn the scale on.
2. If required, press   key to zero weight display.
3. Assist patient onto the scale.
4. When weight is stable, the  (STABLE) annunciator will turn.
5. The weight reading will automatically lock, and the annunciator resembling a padlock  will turn on. Note that the amount of time the reading will hold is dependent upon the *HOL d* setting in Setup. Press the  if more time is needed to read the weight.
6. Read and record the weight displayed.
7. If the  key was not pressed in Step 5, press it now to hold the weight reading.
8. Press the  key. The display will change to the default height of 66.2 inches (168.0 cm).
9. Press  or  keys to increment or decrement to the correct height.
10. Press the  key. The display will change to show the BMI (Body Mass Index).
11. Read and record the patient's BMI.
NOTE: While the patient is still standing on the scale, pressing the  key will toggle between the patient's BMI and weight.
12. If a printer is connected to the scale, ensure both height and weight are shown on the display, and then press the  key to print a ticket. **NOTE:** The weight reading must be locked (padlock  turned on) or the  key must be pressed to print a ticket. Note that the  key must be pressed again to unlock the weight reading.
13. Assist patient off the scale.
14. Once the patient is off the scale, the display automatically returns to weight only mode.

MOTHER/BABY WEIGHING



ALWAYS assist the mother alone, and when holding the baby/child in stepping on and off the scale platform to ensure they do not fall.
NEVER leave the mother or mother holding the baby/child unattended while they are on the scale platform. Failure to maintain control of the mother or mother holding the baby/child at all times can result in severe injury to the mother or mother holding the baby/child and/or you.

The Mother/Baby Weighing feature can be used to determine the weight of infants and toddlers held by an adult. Note that for accurate weighing, the child should always be weighed with the same adult whose initial weight was determined. In addition, the adult's weight should not change, for example, by removing or adding an item of clothing.

The Mother/Baby Weighing procedure is as follows:

1. Press the  key to turn the scale on.
2. If required, press  key to zero weight display.
3. Assist the mother on the scale.
4. When weight is stable, the  (STABLE) annunciator will turn and the mother's weight will be displayed.
5. Press the  key.
6. The displayed weight will change to show *0.0* and *baby* will be displayed.
7. Assist the mother off the scale.
8. After the mother is holding the baby/child, assist them back onto the scale.
9. When weight is stable, the  (STABLE) annunciator will turn, and the baby/child's weight will be displayed.
10. The weight reading will automatically lock, and the annunciator resembling a padlock  will turn on.

NOTE: The amount of time the reading will hold is dependent upon the *HOLD* setting in Setup. If more time is needed, press the  key to hold the locked weight reading.

11. Read and record the baby/child's weight displayed.
12. To turn off the Mother/Baby Weighing feature, press the  key or press the  key to turn the scale off.
13. Assist the mother holding the baby/child off the scale.

SCALE SETUP

Your apex® Digital Clinical Scale has been pre-configured at the factory and should not require changes for use in most applications. However, if the factory settings do not meet the requirements of your operation, the following describes the setup process for your scale.



NOTE: The keys are not to be operated with pointed objects (pencils, pens, fingernails, etc.). Damage to the keys resulting from this practice will NOT be covered under warranty.

To Enter Setup

1. Press the  key to turn the scale on.
2. The scale will perform a display test (turn on all segments and annunciators) and then change to show the software version.
3. With the software version displayed, press and hold the   key.
4. The display will change to show the  prompt, the current Scale Capacity setting, and turn on the CAL (calibration annunciator).
5. The scale is now ready for setup and calibration.

While in Setup, the current setting prompt will be shown in the smaller upper seven-segment display, while the value of the current setting will be shown in the large lower seven-segment display. Note that when moving through the setup prompts, the default or previously selected value appears first on the display.

Setup Navigation Keys



This is the **Enter** key. Press the  key to accept the currently displayed setting of the parameter and advance to the next setup prompt.



This is the **Lock/Release** key. Press the  key to return to the previous setup prompt.



(Arrow Keys)

These keys are used when selecting setup values. Pressing the  or  keys will increase or decrease the value of the selected parameter or toggle between the available parameter values.

Each press of the  key will increase the displayed setup parameter value by one step or toggle between available values.

Each press of the  key will decrease the displayed setup parameter value by one step or toggle between available values.

NOTE: When entering the scale capacity (), calibration load value () , pressing and holding the arrow keys allows you to rapidly increase or decrease the displayed setup parameter value.

CRP (SCALE CAPACITY)

The display will show *CRP* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

This is the maximum allowed weight on the scale. It should be set to 600.0.

Int (INTERVAL SETTING)

The display will show *Int* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

This is the minimum graduation of the scale. Allowable settings are 1, 2, or 5.

dEC (DECIMAL POINT POSITION)

The display will show *dEC* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

This is the decimal point precision of the scale. Allowable settings are 0, 1, 2, or 3.

0 = XXXXX 1 = XXXX.X 2 = XXX.XX 3 = XX.XXX

Sr (SAMPLE RATE)

The display will show *Sr* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

This is the number of times per second the load cell is sampled. Allowable values are a minimum of 1 sample per second to a maximum of 10 samples per second in one-sample-per-second intervals.

F IL E (DIGITAL FILTER MODE)

The display will show *F IL E* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

This is the amount of digital filtering applied to the scale. Allowable settings are 0, 1, 2, or 3.

0 = Off 1 = Minimal 2 = Moderate 3 = Maximum

moDr (MOTION RANGE)

The display will show *moDr* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

The motion range is the number of divisions of change permitted before indicating unstable (the STABLE annunciator turns off). Allowable values are 1 to 10.

EU-0 (OIML)

This setting controls the OIML (European) specific requirements.

The display will show *EU-0* and the current setting. If the value displayed is acceptable, press the **→** key. Otherwise, press the **↑** or **↓** keys to toggle the OIML selection between *YES* or *no*, and then press the **→** key to save it and proceed to the next prompt.

Allowable settings are *YES* for EU or *no* for US.

P00 (Power Up Zero)

The display will show *P00* and the current setting. If the value displayed is acceptable, press the **→** key. Otherwise, press the **↑** or **↓** keys to toggle the power up zero between *YES* or *no*, and then press the **→** key to save it and proceed to the next prompt.

This setting controls the zeroing of the scale on power up. If enabled, the scale will be reset to zero automatically on power up. Allowable settings are *YES* or *no*.

0Er (Zero Tracking)

The display will show *0Er* and the current setting. If the value displayed is acceptable, press the **→** key. Otherwise, press the **↑** or **↓** keys to select a new value and then press the **→** key to save it and proceed to the next prompt.

This setting controls the automatic zero tracking of the scale. Allowable values are 0 to 10, indicating the number of half-divisions above or below zero that the scale will attempt to maintain the zero position. **NOTE:** Select 0 (zero) to disable zero tracking.

SEr 1 (Com1 Mode)

The display will show *SEr 1* and the current setting. If the value displayed is acceptable, press the **→** key. Otherwise, press the **↑** or **↓** keys to toggle the Com1 Mode between *Cont* (continuous output), *POLL* (weight on demand), and *SPOT* (Welch-Allyn Spot LXi interface), then press the **→** key to save it and proceed to the next prompt.

This setting controls the output for Com 1. Allowable settings are *Cont*, *POLL*, or *SPOT*.

If *Cont* (continuous output) was selected for Com 1, the scale will continuously transmit weight data.

If *POLL* (Weight-On-Demand) was selected for Com 1, and the scale is connected to a computer for transmission of weight data to a PC-based EMR (electronic medical record) software program, it will transmit a single set of weight data each time the computer sends a weight request "ENQ" (hex 05) or an SMA weight request "W".

If *SPOT* (Welch-Allyn Spot LXi interface) was selected for Com 1, the scale will automatically interface to a Welch-Allyn Spot LXi interface device to transmit weight data.

EYPE (Select Type of Printer Output – If SEr 1 (Com1 Mode) is set to POLL)

The display will show *EYPE* and the current setting. If the value displayed is acceptable, press the **→** key. Otherwise, press the **↑** or **↓** keys to select a new value and then press the **→** key to save it and proceed to the next prompt.

Allowable settings are 0 or 1.

0 = Print Ticket

1 = Print Journal Line

EOP (End of Print Linefeeds – If *SER1* (Com1 Mode) is set to *POLL*)

At the end of data sent to a printer, the scale can send a number of carriage return/line feeds to position the paper in the printer for removal or the next print.

The display will show *EOP* and the current setting. If the value displayed is acceptable, press the **⬅** key. Otherwise, press the **↑** or **↓** keys to select a new value and then press the **⬅** key to save it and proceed to the next prompt.

Allowable values are 0 to 9.

USB (USB Mode)

The display will show *USB* and the current setting. If the value displayed is acceptable, press the **⬅** key. Otherwise, press the **↑** or **↓** keys to toggle the USB Mode between *PHdC* (Personal Healthcare Device Class), *ALLyn* (Welch Allyn), or *SnnR* (SMA, Weight-On-Demand) and then press the **⬅** key to save it and proceed to the next prompt.

This setting controls the output for the USB device port. Allowable settings are *PHdC*, *ALLyn*, or *SnnR*.

If *PHdC* (Personal Healthcare Device Class) was selected for USB, the scale will transmit data using the CEN ISO/IEEE 11073 Medical / Health Device Communication Standard.

If *ALLyn* (Welch Allyn) was selected for USB, the scale will automatically transmit data to a Welch Allyn CVSM Device when the weight on the scale stabilizes and the **■** (STABLE) annunciator turns on. (Requires device to have an activated license. Must purchase DETECTO WACONNECT)

If *SnnR* (SMA, Weight-On-Demand) was selected for USB, and the scale is connected to a computer for transmission of weight data to a PC-based EMR (electronic medical record) software program, it will transmit a single set of weight data each time the computer sends a weight request "ENQ" (hex 05) or an SMA weight request "W".

TYPE (Select Type of SMA Output – If *USB* (USB Mode) is set to *SnnR*)

The display will show *TYPE* and the current setting. If the value displayed is acceptable, press the **⬅** key. Otherwise, press the **↑** or **↓** keys to select a new value and then press the **⬅** key to save it and proceed to the next prompt.

Allowable settings are 0 or 1.

0 = Print Ticket

1 = Print Journal Line

EOP (End of Print Linefeeds – If *USB* (USB Mode) is set to *SnnR*)

At the end of data sent to a printer, the scale can send a number of carriage return/line feeds to position the paper in the printer for removal or the next print.

The display will show *EOP* and the current setting. If the value displayed is acceptable, press the **⬅** key. Otherwise, press the **↑** or **↓** keys to select a new value and then press the **⬅** key to save it and proceed to the next prompt.

Allowable values are 0 to 9.

***YEAR* (YEAR)**

The display will show *YEAR* and the current setting. If the value displayed is acceptable, press the  key. Otherwise, press the  or  keys to select a new value and then press the  key to save it and proceed to the next prompt.

This is the current year setting of the real-time clock. Allowable values are 2015 to 2099.

***month* (MONTH)**

The display will show *month* and the current setting. If the value displayed is acceptable, press the  key. Otherwise, press the  or  keys to select a new value and then press the  key to save it and proceed to the next prompt.

This is the current month setting of the real-time clock. Allowable values are 1 to 12.

1 = January	4 = April	7 = July	10 = October
2 = February	5 = May	8 = August	11 = November
3 = March	6 = June	9 = September	12 = December

***day* (DAY)**

The display will show *day* and the current setting. If the value displayed is acceptable, press the  key. Otherwise, press the  or  keys to select a new value and then press the  key to save it and proceed to the next prompt.

This is the current day setting of the real-time clock. Allowable values are 1 to 31.

***hour* (HOUR)**

The display will show *hour* and the current setting. If the value displayed is acceptable, press the  key. Otherwise, press the  or  keys to select a new value and then press the  key to save it and proceed to the next prompt.

This is the current hour setting of the real-time clock. Allowable values are 0 to 23.

NOTE: The hour is entered in a 24-hour format. When entering the hour after 12:00 PM (Noon), you must add 12 to the time. For example, 3:00 PM would be entered as 15.

***min* (MINUTE)**

The display will show *min* and the current setting. If the value displayed is acceptable, press the  key. Otherwise, press the  or  keys to select a new value and then press the  key to save it and proceed to the next prompt.

This is the current minute setting of the real-time clock. Allowable values are 0 to 59.

***sec* (SECONDS)**

The display will show *sec* and the current setting. If the value displayed is acceptable, press the  key. Otherwise, press the  or  keys to select a new value and then press the  key to save it and proceed to the next prompt.

This is the current seconds setting of the real-time clock. Allowable values are 0 to 59.

HTL (Sonar Height Calibration)

The display will show *HTL* and the current setting *no*.

To calibrate the sonar sensor:

1. Press the \uparrow or \downarrow keys to select *YES*, and then press the \leftarrow key.
2. The display will show *CLEAR* for approximately four seconds, indicating you should step away from the sensor at a distance of *at least 6 feet* as it prepares to calibrate.
3. After approximately four seconds, the display will briefly show *busy* as the sonar sensor calibrates.



NOTE: Movable objects that might interfere with the sound waves of the sensor should be removed from a 6-foot radius. Objects that are not easily movable (walls, a desk, large heavy objects that stay in one spot) can be left in place. These larger objects will be masked away in the calibration process.

5 HT (SENSOR HEIGHT)

The display will show *5 HT* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

This is the height in *centimeters* from the scale platform to the bottom of the sonar height sensor. This value is used to determine the patient's height, and should be measured and entered as accurately as possible to ensure accurate height measurements.

HOLD (HOLD TIME)

This setting is used by the scale to hold a stable patient weight for a desired amount of time. For example, if a value of 5 seconds is used, then when the scale locks onto a stable patient weight, it will remain locked for 5 seconds before automatically releasing the weight.

The display will show *HOLD* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

This setting controls the auto-locking feature. Allowable values for hold time are 0 to 20.

CAL (CALIBRATION)

The display will show *CAL* and the current setting *no*. If the scale has been previously calibrated and you wish to skip calibration and proceed to the *TYPE* (Scale Model) prompt, press the \leftarrow key and the previous calibration will be retained.

To begin calibration, press the \uparrow key to select *YES* and then press the \leftarrow key. After pressing the \leftarrow key, the display will change to *LOAD*.

L0Rd (LOAD CALIBRATION WEIGHT)

With the display showing *L0Rd*, perform the following steps:

1. Make certain the scale platform is empty and free of debris.
2. Place the desired amount of calibrated test weights on the scale platform. A minimum of 50% of the scale's capacity is required. However, 70% to 100% is recommended.
3. Press the \leftarrow key.
4. If the value displayed is acceptable, press the \leftarrow key again. Otherwise, determine the exact amount of test weight placed on the scale platform and then use the \uparrow or \downarrow keys to select the test weight amount.
5. Verify that the numbers selected are the same as the amount of the test weight, and then press the \leftarrow key.
6. Starting at the left and proceeding right, a series of dashes will appear on the display. The dashes will stay on the display momentarily, then disappear, after which the display will proceed to the next prompt.

U0Ld (UNLOAD CALIBRATION WEIGHT)

After a moment, the display will change to *U0Ld*.

1. Remove the test weights from the scale platform and then press the \leftarrow key.
2. Starting at the left and proceeding right, a series of dashes will appear on the display. The dashes will stay on the display momentarily, then disappear, after which the calibration factor will be saved, and the display will proceed to the next prompt.



IMPORTANT: During the time the dashes are appearing on the display, ensure that the loaded (or empty) scale is stable.

G0R0 (Gravity Compensation)

Gravity compensation accounts for latitudes and elevations that are different from where the scale was calibrated. To calculate the value for this parameter, use the gravitational constant of the location where the scale was calibrated divided by the gravitational constant of where the scale will be installed:

$$\frac{\text{Gravitational Constant (Calibration location)}}{\text{Gravitational Constant (Operation location)}} = \text{value}$$

This should give you a value close to 1 that you can enter to compensate for variations in gravity due to elevation/latitude.

The display will show *G0R0* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to select a new value and then press the \leftarrow key to save it and proceed to the next prompt.

Allowable values for *G0R0* are 0.000 to 2.000.

NOTE: The default value is 1.000, which means there is no gravity compensation.

L0n9 (Factory Use Only)

The display will show *L0n9* and the current setting. This setting is for factory use only and must always be set to *no*.



IMPORTANT! If the setting for *L0n9* is *YES*, press the \uparrow or \downarrow keys to change it to *no*, and then press the \leftarrow key to save it and proceed to the next prompt.

EYPE (Scale Model)

The display will show *EYPE* and the current setting. If the value displayed is acceptable, press the \leftarrow key. Otherwise, press the \uparrow or \downarrow keys to toggle the Scale Model between *RPEr* (apex®) or *CUST* (custom, not applicable at this time) and then press the \leftarrow key to save it. You will be returned to the *CRP* prompt, the current Scale Capacity setting.

This will change the default settings and operation of the scale. For instance, select *RPEr* for the type to use the stand-up type scale for the scale with the inline height rod or sonar height rod.

Allowable settings are *RPEr* or *CUST*.



NOTE: If your scale is the model apex-C or apex-sh-C (equipped with the Redbird Wi-Fi and Bluetooth (BLE) wireless transmitter), additional setup prompts will be shown after selecting the *EYPE* setting.

Refer to the APEX-C and APEX-SH-C Wi-Fi and Bluetooth Setup and Operation Manual (3300-0320-0M) for guidance through the setup and operation of the APEX Wi-Fi and Bluetooth (BLE) wireless transmitter features. Otherwise, setup and calibration are complete.

Setup and Calibration are Complete

The setup and calibration process has been completed. Press the \odot key to turn the scale off and then press it again to turn the scale back on. The scale is now ready for normal operation.

DATA FORMAT

Cont (Continuous Output)

If *Cont* (continuous output) is selected, the scale will continuously transmit weight data in SMA format (see below).

POLL (Weight-On-Demand)

If *POLL* (Weight-On-Demand) is selected and the scale is connected to a host device (computer) for transmission of weight data to a PC-based EMR (electronic medical record) software program, it will transmit a single set of weight data each time the host device (computer) sends an SMA weight request "W" or a weight request "ENQ" (hex 05). An example and explanation of the data format transmitted are shown below.

SMA Format (*Cont* or *POLL*)

This format is used if the scale is configured for *Cont* (continuous output), *OR* if the scale is configured for *POLL* (weight-on-demand) and the host device (computer) sends:

<LF>W<CR>

or

<ENQ> (hex 05)

The scale will respond with the following SMA weight string:

<LF>S1GM^DDDDDDDDDDUUU<CR>

Where:

LF =	Line Feed	Line feed character (hex 0A)
S =	Status	O = Over Cap, Z = Center Zero, U = Below Zero, E = Error
1 =	the number 1	
G =	Mode of operation	G = Gross, N = Net, T = Tare
M =	Motion bit	M = Motion, " "(blank) = Settled (no motion)
^ =	Space	
DDDDDDDDDD =	Weight	Weight with a decimal point if necessary
UUU =	Units	e. g. lb, kg
CR =	Carriage Return	Carriage Return (hex 0D)

PRINTER OUTPUT FORMATS

Print Ticket Format

If *O* = Print Ticket was selected for the *EYPE* prompt when *SE-1* (Com1 Mode) is set to *POLL* or *USB* (USB Mode) is set to *SnR*, the following format will be used:

If <i>EUr-0</i> (OIML) is set to <i>n0</i>		If <i>EUr-0</i> (OIML) is set to <i>YES</i>	
Date	mm/dd/yy	Date	dd/mm/yy
Time	hh:mm	Time	Hh:mm
Weight	wwwwww uu	Weight	wwwwww uu
Height	hhhhh vv	Height	hhhhh vv
BMI	bbbb	BMI	bbbb

Where:

mm/dd/yy = month/day/year
dd/mm/yy = day/month/year
hh:mm = hours:minutes
wwwwww = weight
uu = weight units
hhhhh = height
vv = height units
bbbb = body mass index

Print Journal Line Format

If *I* = Print Journal Line was selected for the *EYPE* prompt when *SE-1* (Com1 Mode) is set to *POLL* or *USB* (USB Mode) is set to *SnR*, the following format will be used:

If *EUr-0* (**OIML**) is set to *n0*

mm/dd/yy, hh:mm, wwwwww uu, hhhhhh vv, bbbb

If *EUr-0* (**OIML**) is set to *YES*

dd/mm/yy, hh:mm, wwwwww uu, hhhhhh vv, bbbb

Where:

mm/dd/yy = month/day/year
dd/mm/yy = day/month/year
hh:mm = hours:minutes
wwwwww = weight
uu = weight units
hhhhh = height
vv = height units
bbbb = body mass index

EVENT COUNTER

Your apex® Digital Clinical Scale has been designed with an Event Counter type of security seal. When selected, the scale will display two numbers representing the Calibration and Configuration counters.

Calibration Counter (CRL)

The calibration counter is incremented when a value in the calibration part of the setup is changed (C_{RP}, *int*, dEC, S_r, F_{LT}, n_n0_t, E_{UR}0, CRL, G_rA_u, L_{on}9, and E_{TYPE}). The counter is only incremented 1 time, even if more than one parameter is changed in setup.

Configuration Counter (CFG)

The configuration counter is incremented when a value in the configuration part of the setup is changed (P_{U0}, O_{tr}, S_{Er} 1, S_{Er} 2, U_{SB}, Y_{EAR}, n_nt_H, d_{RY}, H_{OUR}, n_n In, S_{EC}, S_HE_T, H_oL_d). The counter is only incremented 1 time, even if more than one parameter is changed in setup.

To Review the Event Counter:

1. Press the  key to turn the scale on.
2. The scale will perform a display test (turn on all segments and annunciators) and then change to show the software revision for a few seconds.
3. Next, the display will change to the Weight Display with the   (ZERO) and  (STABLE) annunciators turned on to show a stable, center-of-zero weight condition.
4. Press and hold the  key.
5. The display will show height briefly, followed by the software revision.
6. Release the  key.
7. The display will change to show CRL (Calibration Counter) on the small upper seven-segment display and up to a 3-digit number on the large lower seven-segment display for approximately two (2) seconds.
8. Next, the display will show CFG (Configuration Counter) on the small upper seven-segment display and up to a 3-digit number on the large lower seven-segment display for approximately two (2) seconds and then change to show all dashes.



NOTE: If your scale is the model apex-C or apex-sh-c (equipped with the Redbird Wi-Fi and Bluetooth (BLE) wireless transmitter), additional information will be shown after the configuration Counter. Refer to the APEX-C and APEX-SH-C Wi-Fi and Bluetooth Setup and Operation Manual (3300-0320-0M), section Display Scale Wi-Fi and Bluetooth Settings for additional information and instructions.

9. To return to normal operation, press the  key or press the  key to turn off the scale.

ERROR AND OPERATION MESSAGES

The apex® scale is equipped with diagnostic software that tests various portions of the scale's circuitry and verifies proper operation. Should a problem be detected, an error or status message will be displayed. The following lists these messages and their meaning.

Display	Meaning
→0←	This symbol appears when the scale weight reading is at center of zero.
	This symbol appears if the weight has been manually locked by pressing the  key.
-----	This message appears if the  key has been pressed without any weight on the scale.
OVER	The weight on the scale exceeds the scale's capacity.
Err OF	This message appears if there are too many characters to display. For example, attempting to display a negative number greater than -9,999 or a positive number greater than 99,999.
Lo batt	When the batteries are near the point where they need to be replaced, the scale display will show <i>Lo</i> on the small upper seven-segment display and <i>batt</i> on the large lower seven-segment display. Note that when the battery voltage drops too low for accurate weighing, the scale will automatically shut off and you will be unable to turn it back on.
Calib	The scale requires calibration. The weight will show as dashes. Consult your scale service representative.
AdErr	Consult your scale service representative.
Err RL	
Err RH	

BEFORE YOU CALL FOR SERVICE

Problem	Possible Solutions
The display does not turn on.	AC Operation: <ul style="list-style-type: none"> • Is the AC power adapter fully inserted into the wall outlet? • Check the wall outlet for proper AC power. Try another electrical appliance in the same outlet. Does it work? • Check the circuit breaker. • Has there been a power failure? Battery operation: <ul style="list-style-type: none"> • Check if the batteries are installed and match the polarity markings located in the battery holders. • One or more of the batteries may be improperly positioned. Ensure they are completely in the battery holder. • If using Alkaline batteries, remove the old batteries and replace them with new ones. • If using NI-CAD or NiMH batteries, remove the discharged batteries and replace them with fully charged batteries. Use an external charger to recharge the discharged batteries.
Incorrect weight is displayed.	Make sure the scale platform is not touching an adjacent object. Have proper operation procedures been followed?
Weight is not displayed.	Refer to Error and Operation Messages.

CARE AND CLEANING




NOTE: The scale contains no user-serviceable parts and maintenance should be limited to an occasional cleaning and battery replacement as required.

- Do not submerge the scale in water, pour, or spray water directly on it to clean it. The scale is not waterproof, and covering it with water will damage it and void the warranty.
- Always remove power before cleaning.
- Do not use wire brushes, abrasives, or cleaning tools such as steel pads and scrapers, which will scratch the painted surface. Instead, use soft cloths or plastic scouring pads for cleaning.
- When possible, use treated water. Hard water can leave behind deposits. Soft water is much gentler on the painted steel's surface.
- Avoid the use of acetone, thinner, or other volatile solvents, and abrasive-type cleaners for cleaning. If required, a mild solvent such as mineral spirits can be used to remove oil, grease, tars, wax, and similar substances. Use a cloth dampened with mineral spirits and apply only to contaminated areas. Follow up the use of this mild solvent with detergent cleaning and rinsing.

PARTS IDENTIFICATION

APEX (with Inline Height Rod) FINAL ASSEMBLY

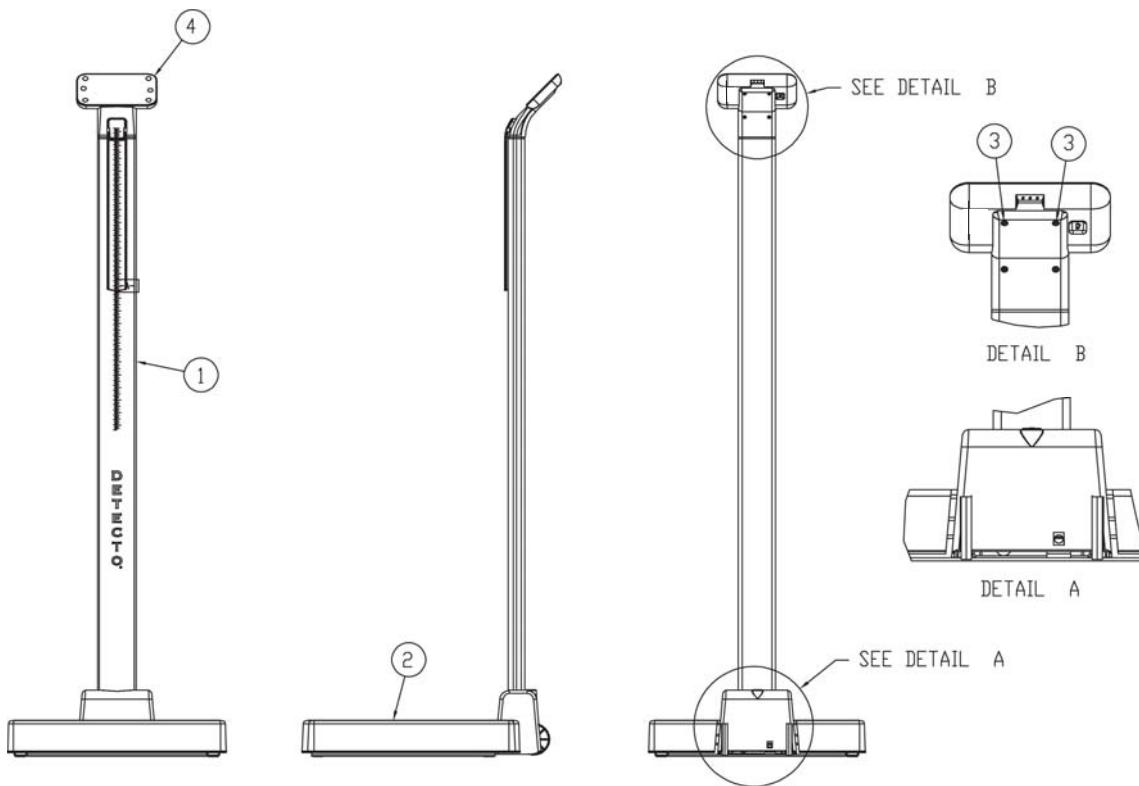


Item	Qty.	Part Number	Description
1	1	3300-0142-0A	SUB-ASSY, APEX COLUMN, MHR
2	1	3300-0145-0A	SUB-ASSY, APEX BASE
3	2	6021-1293	SCW FLAT-HEAD THREAD CUTTING TYPE 25, #4-24 X 1/4, PHIL. DR. Z-PLATE
		3300-0177-0A	SUB-ASSEMBLY, DISPLAY, APEX-AC
		3300-0286-0A	SUB-ASSEMBLY, DISPLAY, APEX-ACUK
		3300-0153-2A	SUB-ASSEMBLY, DISPLAY, APEX-C-AC
		3300-0454-0A	SUB-ASSEMBLY, DISPLAY, APEX-C-ACUK
		3300-0350-0A	SUB-ASSEMBLY, DISPLAY, APEX-EU-AC
		3300-0179-0A	SUB-ASSEMBLY, DISPLAY, APEX-LXI-AC
		3300-0420-0A	SUB-ASSEMBLY, DISPLAY, APEX-LXI-ACUK
		3300-0185-0A	SUB-ASSEMBLY, DISPLAY, APEX-UWA-AC
*	1	6800-1045	DOMESTIC: 100 TO 240 VAC 12 VDC 1A WALL MOUNT UL/CE APPROVED ADAPTER WITH US (TYPE B) INPUT PLUG
*	1	6800-1047	INTERNATIONAL: 100 TO 240 VAC 12 VDC 1A WALL MOUNT MULTI-BLADE UL/CE APPROVED ADAPTER WITH EU (TYPE C) AND UK (TYPE G) INPUT PLUGS

* NOT SHOWN


PARTS IDENTIFICATION, CONT.

APEX (with Inline Height Rod) COLUMN SUB-ASSEMBLY

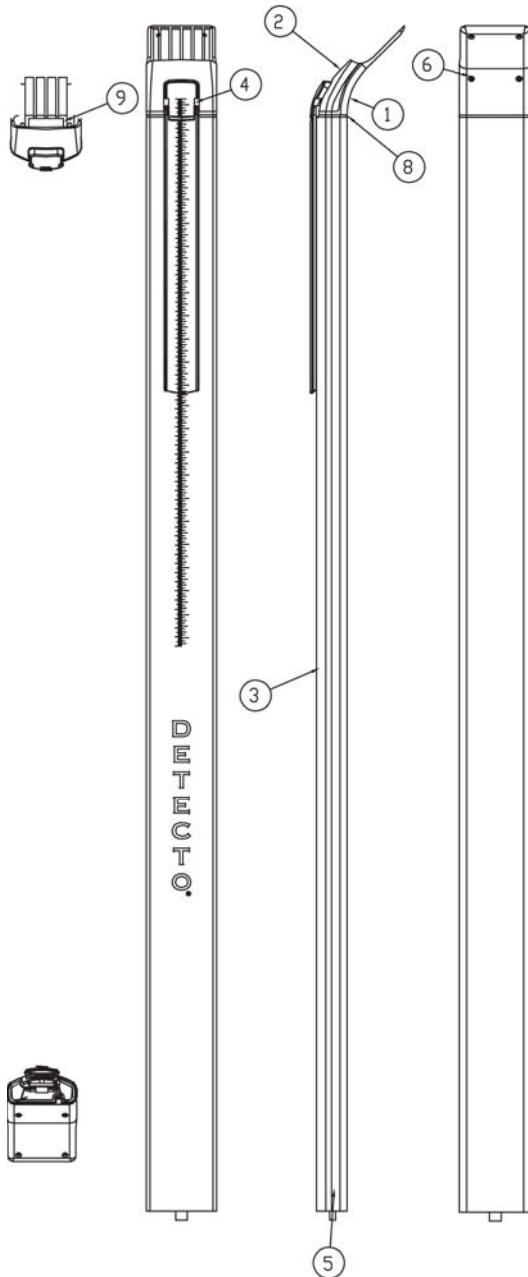

Item	Qty.	Part Number	Description
1	1	3300-0067-08	THROAT REAR
2	1	3300-0069-08	THROAT FRONT, MHR
3	1	3300-0087-18	COLUMN, DRILLED
4	1	3300-0146-0A	SUB-ASSY, MHR
5	1	3300-0278-0A	APEX COLUMN CABLE MHR
6	2	6021-1293	SCW FLAT-HEAD THREAD CUTTING TYPE 25, #4-24 X 1/4, PHIL. DR. Z-PLATE
7	1	6021-1509	SCW PAN-HEAD, SHEET METAL #8X.75
8	1	6650-1114	O-RING 2 ID X 2-3/16 OD X 3/32 THK
9	1	8530-B159-08	SEALING TAB

PARTS IDENTIFICATION, CONT.
APEX-SH (with Sonar Height Rod)
FINAL ASSEMBLY

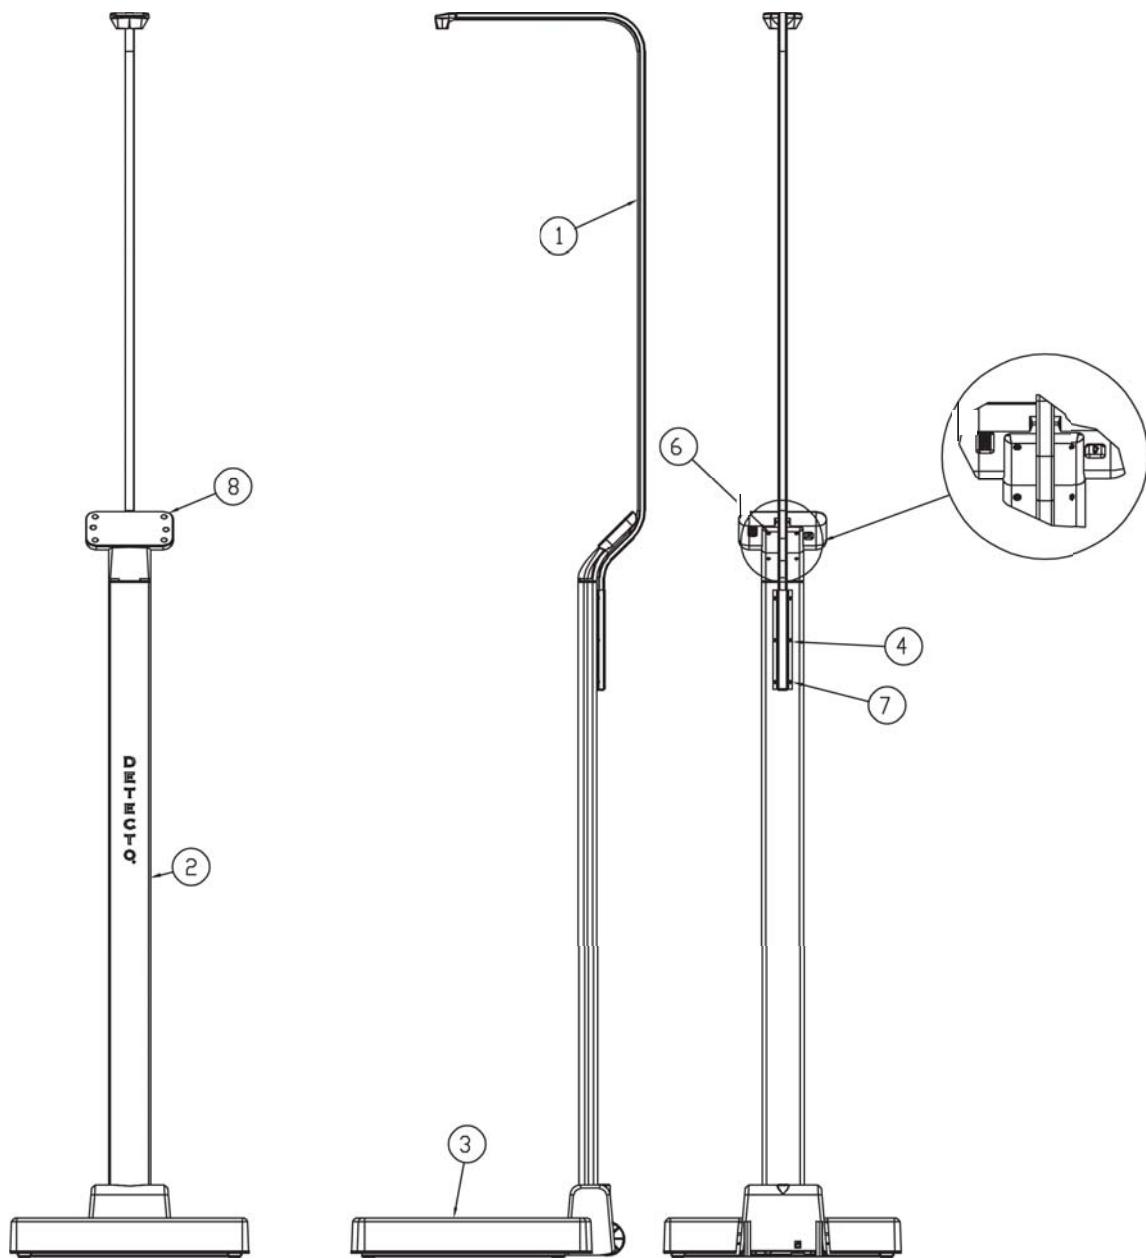


PARTS IDENTIFICATION, CONT.
APEX-SH (with Sonar Height Rod)
FINAL ASSEMBLY, CONT.

Item	Qty.	Part Number	Description
1	1	3300-0140-0A	SUB-ASSY, SONAR HR
2	1	3300-0143-0A	SUB-ASSY, APEX COLUMN, SONAR
3	1	3300-0145-0A	SUB-ASSY, APEX BASE
4	1	3300-0265-08	SONAR BRACKET
5	1	6013-0049	NUT 1/4-20 HEX JAM
6	2	6021-1293	SCW FLAT-HEAD THREAD CUTTING TYPE 25, #4-24 X 1/4, PHIL. DR. Z-PLATE
7	6	6021-6017	SCW ROUND-HEAD BLUNT SS. SHEET METAL #6 X .25
		3300-0180-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-AC
		3300-0344-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-ACUK
		3300-0152-2A	SUB-ASSEMBLY, DISPLAY, APEX-SH-C-AC
		3300-0415-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-C-ACEU
		3300-0420-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-C-ACMUK
		3300-0420-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-C-ACUK
		3300-0352-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-EU-AC
		3300-0182-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-LXI-AC
		3300-0152-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-S2E1-ACMUK
		3300-0183-0A	SUB-ASSEMBLY, DISPLAY, APEX-SH-UWA-AC
*	1	6800-1045	DOMESTIC: 100 TO 240 VAC 12 VDC 1A WALL MOUNT UL/CE APPROVED ADAPTER WITH US (TYPE B) INPUT PLUG
*	1	6800-1047	INTERNATIONAL: 100 TO 240 VAC 12 VDC 1A WALL MOUNT MULTI-BLADE UL/CE APPROVED ADAPTER WITH EU (TYPE C) AND UK (TYPE G) INPUT PLUGS

* NOT SHOWN


PARTS IDENTIFICATION, CONT.
APEX-SH (with Sonar Height Rod)
COLUMN SUB-ASSEMBLY

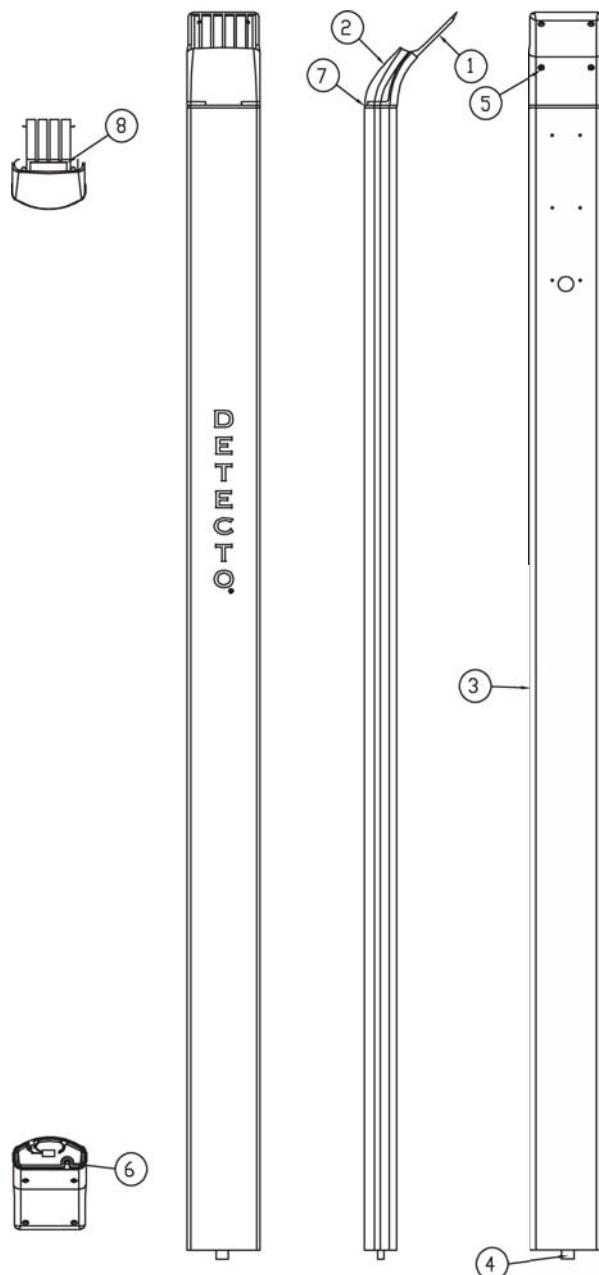

Item	Qty.	Part Number	Description
1	1	3300-0067-08	THROAT REAR
2	1	3300-0068-08	THROAT FRONT
3	1	3300-0087-08	COLUMN, DRILLED & SONAR
4	1	3300-0278-1A	CABLE, APEX COLUMN, SONAR
5	2	6021-1293	SCW FLAT-HEAD THREAD CUTTING TYPE 25, #4-24 X 1/4, PHIL. DR. Z-PLATE
6	1	6021-1509	SCW PAN-HEAD, SHEET METAL #8X.75
7	1	6650-1114	O-RING 2 ID X 2-3/16 OD X 3/32 THK
8	1	8530-B159-08	SEALING TAB

PARTS IDENTIFICATION, CONT.


SONAR HEIGHT ROD SUB-ASSEMBLY

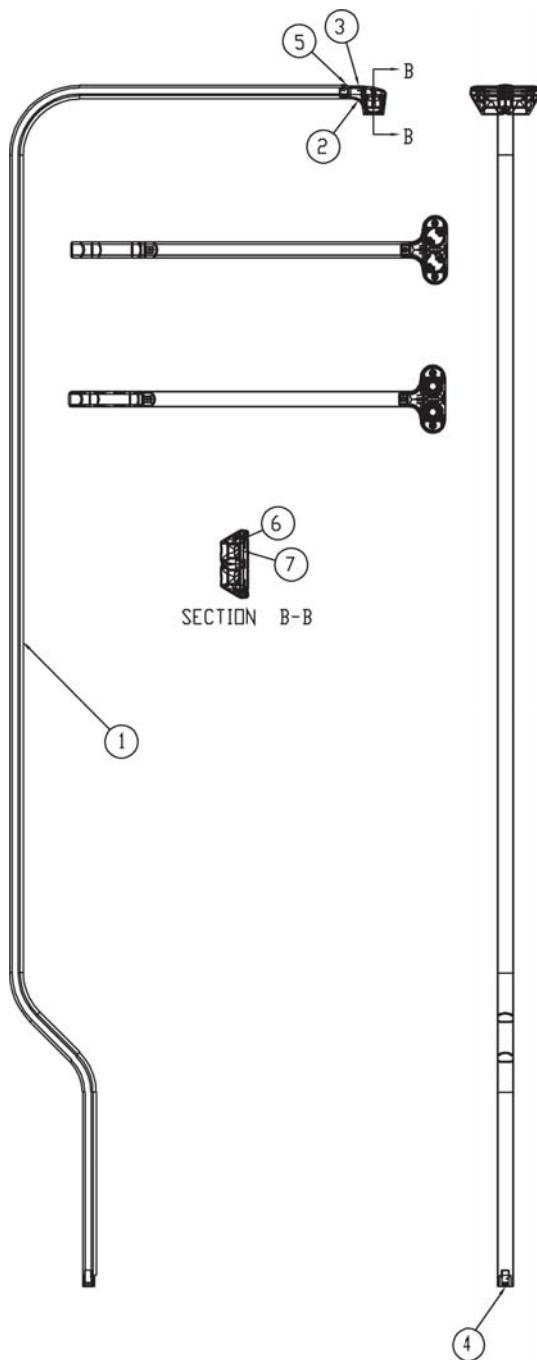

Item	Qty.	Part Number	Description
1	1	3300-0022-08	HEIGHT SENSOR TUBE
2	1	3300-0060-08	SONAR FRONT ENCLOSURE
3	1	3300-0061-08	SONAR REAR ENCLOSURE
4	1	3300-0135-0A	CABLE, ICON/APEX SONAR
5	1	6021-1293	SCW FLAT-HEAD THREAD CUTTING TYPE 25, #4-24 X 1/4, PHIL. DR. Z-PLATE
6	2	6021-2078	SCW PAN HEAD PHILIPS #1-32X3/8" THREAD FORMING, 18-8 SS
7	1	3300-0039-2A	ULTRASONIC RANGING MODULE


PARTS IDENTIFICATION, CONT.

APEX TO PC SERIAL CABLE – 3300-0271-0A

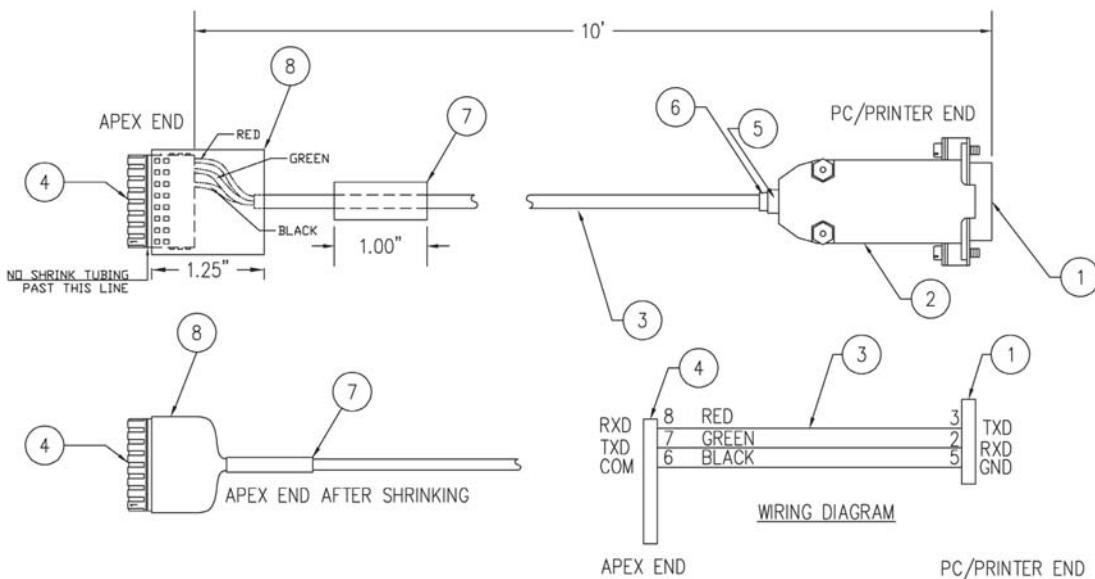

Item	Qty.	Part Number	Description
1	1	6610-2335	CONN 09 PIN D SUB RECEPT SOLDER CUP
2	1	6610-1131	CONN BACKSHELL, 9 PIN D, METAL/PLASTIC
3	10'	6980-1043	CABLE 04 COND 24GA SHLD .18" MAX OD
4	1	6610-5175	CONNECTOR, 8 PIN PHOENIX CONTACT # 1778890
5	.08	6710-0004	SHRINK TUBING 1/4" BLACK, 1 INCH
6	.06	6710-0003	SHRINK TUBING 3/16" BLACK, 3/4 INCH
7	.083'	6710-0017	SHRINK TUBING 3/8" BLACK, 1 INCH
8	.104'	6710-0016	SHRINK TUBING 3/4" BLACK, 1 1/4 INCH

APEX TO P150 PRINTER CABLE – 3300-0271-3A

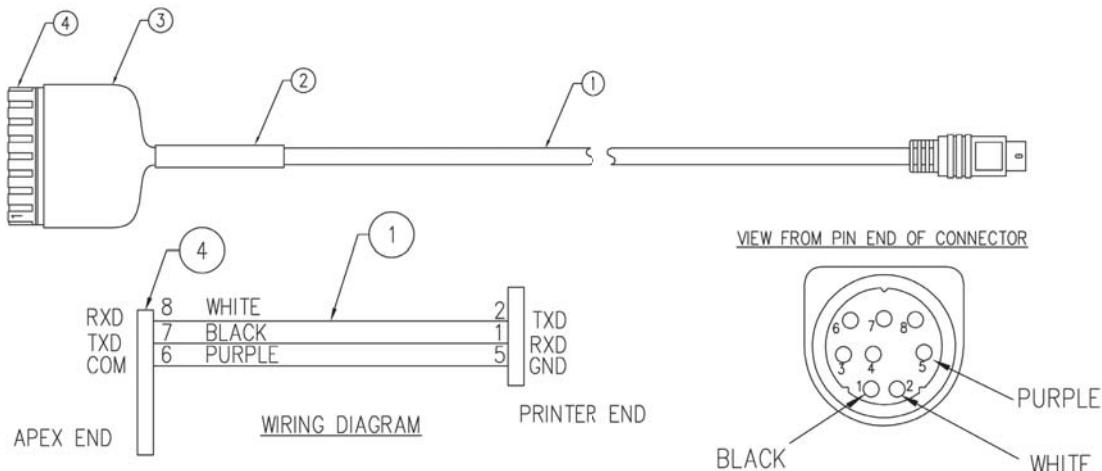

Item	Qty.	Part Number	Description
1	6.5'	6610-0003	CABLE ASSY, 8-PIN MINI-DIN TO S/T 6.5 FEET
2	.083'	6710-0017	SHRINK TUBING 3/8" BLACK, 3 TO 1 SHRINK
3	.104'	6710-0016	SHRINK TUBING 3/4" BLACK, 3 TO 1 SHRINK
4	1	6610-5175	CONNECTOR, 8 PIN PHOENIX CONTACT # 1778890


PARTS IDENTIFICATION, CONT.

BASE SUB-ASSEMBLY

Item	Qty.	Part Number	Description
1	1	3300-0053-08	COLUMN CLAMP
2	1	3300-0058-28	SOCKET COVER, APEX
3	2	3300-0059-08	WHEELS
4	2	3300-0082-08	LOAD CELL SPACER
5	1	3300-0086-0A	APEX WEIGHBRIDGE
6	1	3300-0094-0A	APEX BASE WELDMENT
7	1	3300-0136-1A	CABLE, APEX BATTERY
8	1	3300-0138-1A	CABLE, APEX LOAD CELL
9	1	3300-0147-0A	SUB-ASSY, PLATFORM COVER, APEX
10	4	6013-0049	NUT 1/4-20 HEX JAM
11	2	6013-2006	PUSH NUT, 1/4"
12	4	6013-2008	NUT 1/4-20 CAGE Z/P
13	4	6021-0654	SCW PAN-HEAD, MACHINE-SCW 06-32X.250
14	4	6021-1417	SCW SOCKET-HD. CAP-SCREW, .25-20X2.0
15	8	6021-1550	SCW FLAT-HEA, CAP-SCREW M8X1.25X30MM
16	4	6540-1122	FOOT, RUBBER, N .81 DIAMETER, ADHESIVE
17	A/R	6560-1061	ADHESIVE LOCTITE 262-21 THREAD LOCKER, HS
18	1	6690-0001	LEVEL, "BULLSEYE" TYPE
19	1	593GR986	SERIAL TAG ASSY


PARTS IDENTIFICATION, CONT.

BASE SUB-ASSEMBLY

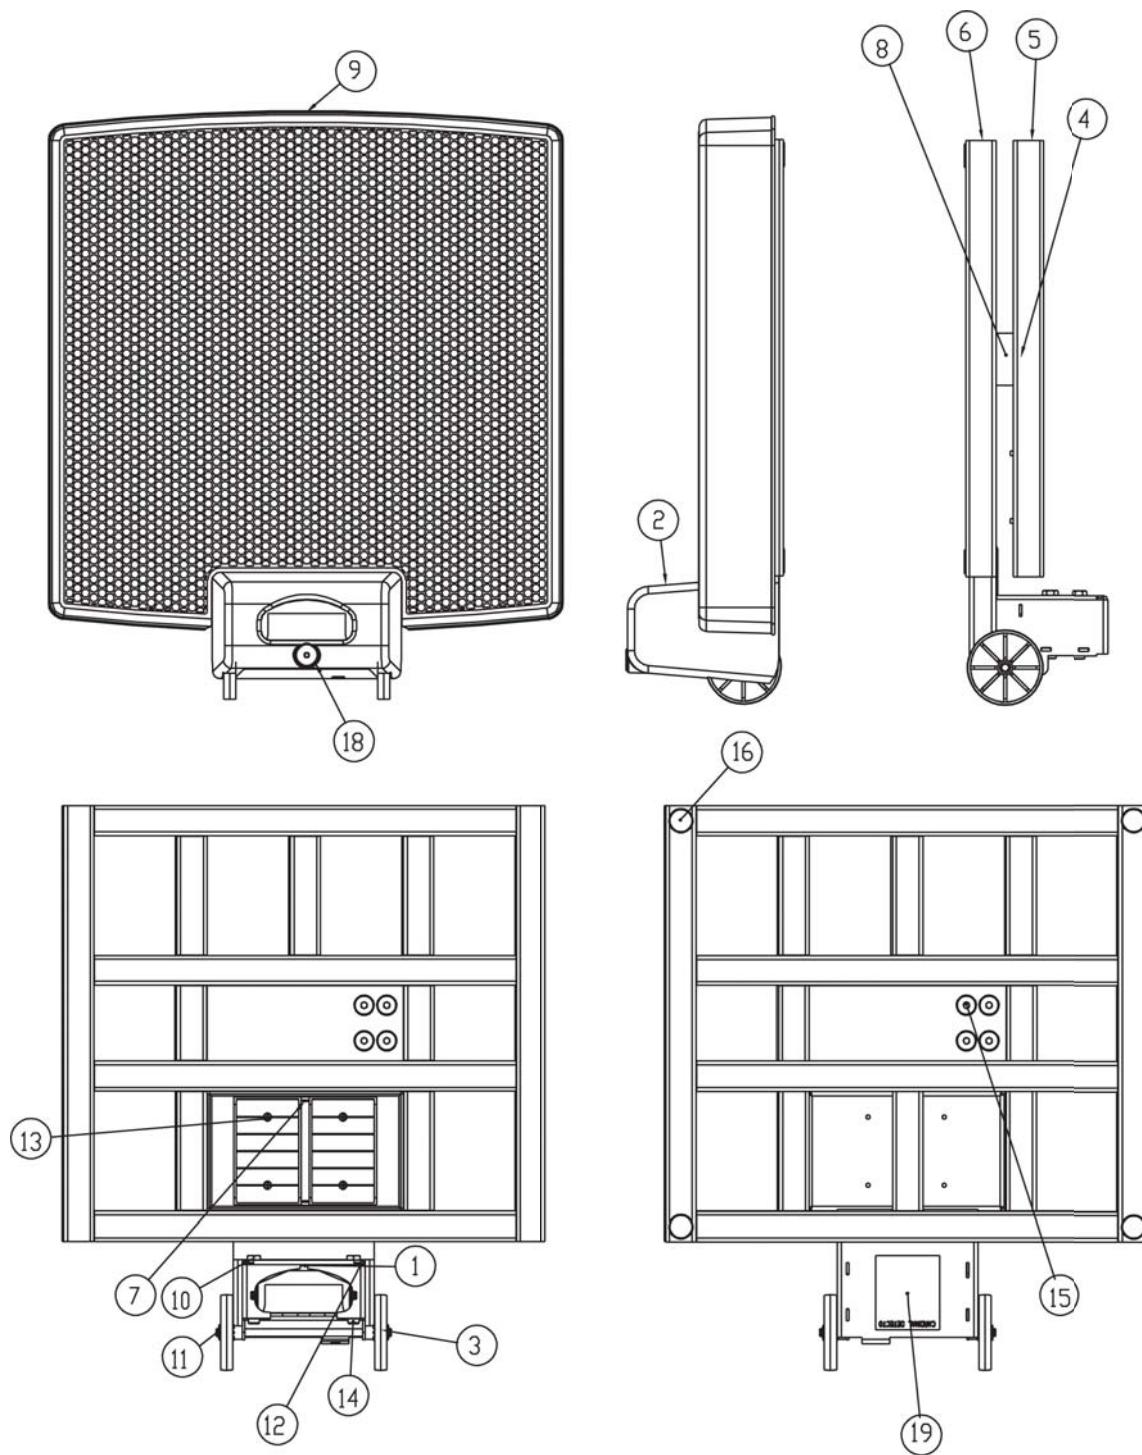

PARTS IDENTIFICATION, CONT.

APEXH FINAL ASSEMBLY

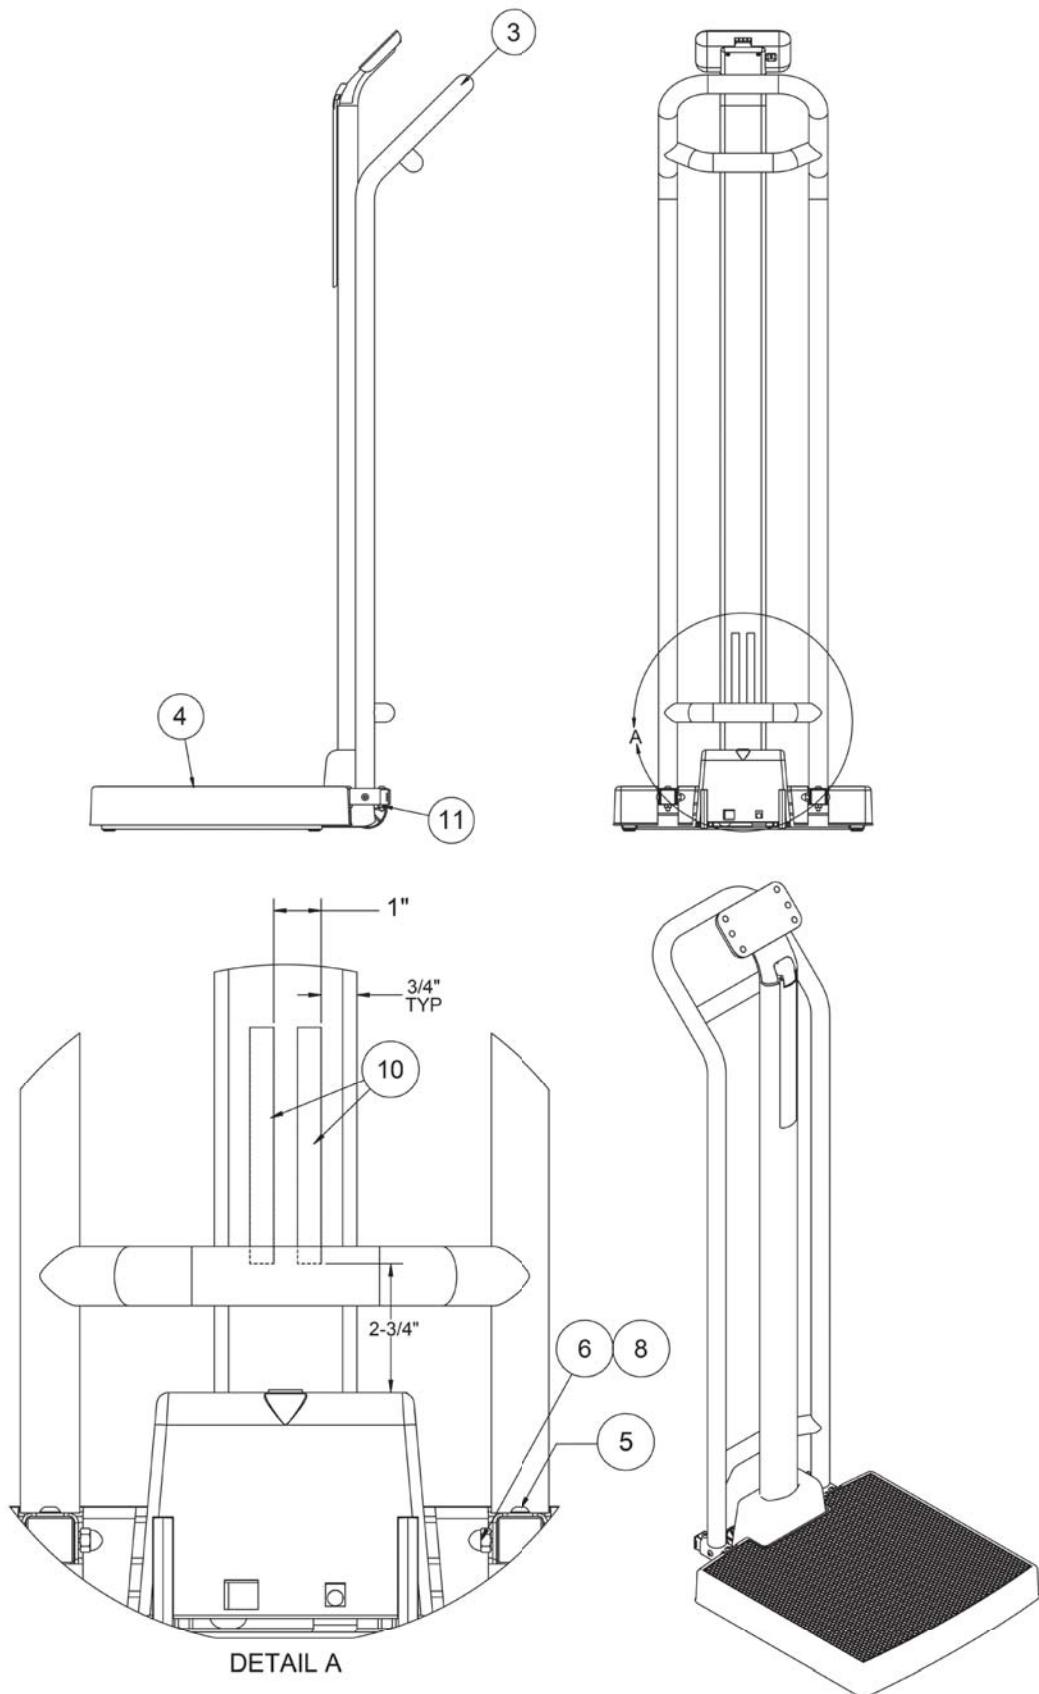

PARTS IDENTIFICATION, CONT.
APEXH-AC (with Handrail and Inline Height Rod) FINAL ASSEMBLY

Item	Qty.	Part Number	Description
1	1	3300-0142-0A	SUB-ASSY, APEX COLUMN, MHR
2	1	3300-0515-0A	SUB-ASSY, DISPLAY, APEXH-AC
3	1	3300-0446-0A	APEX HANDRAIL ASSY
4	1	3300-0506-0A	SUB-ASSY, APEXH BASE
5	6	6007-4540	1/4-20 X 1-1/2 HEX ZINC BUTTON CAP SCREW
6	2	6013-0420	NUT 1/4-20 HEX ACORN Z/P
7	—	—	—
8	2	6024-0039	WASHER LOCK HELICAL SP 1/4" REG Z-PL
9	—	—	—
10	2	8525-0407-0A	SER. TAG 5" X 0.5", 3 MIL AS
11	4	6013-0051	NUT 1/4-20 HEX Z/P LOCKNUT

APEXH-SH-AC (Handrail and Sonar Height Rod) FINAL ASSEMBLY

Item	Qty.	Part Number	Description
1	1	3300-0143-0A	SUB-ASSY, APEX COLUMN, SONAR
2	1	3300-0525-0A	SUB-ASSY, DISPLAY, APEXH-SH-AC
3	1	3300-0446-0A	APEX HANDRAIL ASSY
4	1	3300-0506-0A	SUB-ASSY, APEXH BASE
5	6	6007-4540	1/4-20 X 1-1/2 HEX ZINC BUTTON CAP SCREW
6	2	6013-0420	NUT 1/4-20 HEX ACORN Z/P
7	—	—	—
8	2	6024-0039	WASHER LOCK HELICAL SP 1/4" REG Z-PL
9	—	—	—
10	2	8525-0407-0A	SER. TAG 5" X 0.5", 3 MIL AS
11	4	6013-0051	NUT 1/4-20 HEX Z/P LOCKNUT

STATEMENT OF LIMITED WARRANTY

DETECTO Scale warrants its equipment to be free from defects in material and workmanship as follows: DETECTO warrants to the original purchaser only that it will repair or replace any part of equipment which is defective in material or workmanship for a period of two **(2) years from date of shipment**. DETECTO shall be the sole judge of what constitutes a defect.

During the **first ninety (90) days** DETECTO may choose to replace the product at no charge to the buyer upon inspection of the returned item.

After the first ninety (90) days, upon inspection of the returned item, DETECTO will repair or replace it with a remanufactured product. The customer is responsible for paying for the freight both ways.

This warranty does not apply to peripheral equipment not manufactured by DETECTO; this equipment will be covered by certain manufacturer's warranty only.

This warranty does not include replacement of expendable or consumable parts. This does not apply to any item which has deteriorated or damaged due to wear, accident, misuse, abuse, improper line voltage, overloading, theft, lightning, fire, water or acts of God, or due to extended storage or exposure while in purchaser's possession. This warranty does not apply to maintenance service. Purchased parts will have a ninety (90) day repair or replacement warranty only.

DETECTO may require the suspect product to be returned to the factory; item(s) must be properly packed and shipping charges prepaid. A return authorization number must be obtained for all returns and marked on the outside of all returned packages. DETECTO accepts no responsibility for loss or damage in transit.

STATEMENT OF LIMITED WARRANTY

Conditions Which Void Limited Warranty

This warranty shall not apply to equipment which:

- A.) Has been tampered with, defaced, mishandled, or has had repairs and modifications not authorized by DETECTO.
- B.) Has had serial number altered, defaced, or removed.
- C.) Has not been grounded according to DETECTO's recommended procedure.

Freight Carrier Damage

Claims for equipment damaged in transit must be referred to the freight carrier in accordance with freight carrier regulations.

This warranty sets forth the extent of our liability for breach of any warranty or deficiency in connection with the sale or use of the product. DETECTO will not be liable for consequential damages of any nature, including but not limited to, loss of profit, delays, or expenses, whether based on tort or contract. DETECTO reserves the right to incorporate improvements in material and design without notice and is not obligated to incorporate improvements in equipment previously manufactured.

The foregoing is in lieu of all other warranties, express or implied including any warranty that extends beyond the description of the product including any warranty of merchantability or fitness for a particular purpose. This warranty covers only those DETECTO products installed in the forty-eight (48) contiguous continental United States.



Ph. (800) 641-2008
E-mail: detecto@cardet.com
203 E. Daugherty
Webb City, MO 64870

04/22/2024
Printed in USA
D268-WARRANTY-DET-B



DETECTO
102 E. Daugherty, Webb City, MO 64870 USA
Ph: 417-673-4631 or 1-800-641-2008
Fax: 417-673-2153
www.Detecto.com
Technical Support: 1-866-254-8261
E-mail: tech@cardet.com

Printed in USA

3300-0188-0M Rev T 07/25