



Waste Mate Trash Bag Installation and Cleaning Instructions

Installing the Trash Bag

- 1. Step on and hold the foot pedal to raise and hold the Waste Mate lid open.
- 2. Raise both bag loops about 30 degrees.
- 3. Place the trash bag in the Waste Mate between the bag loops.
- **4.** Wrap the trash bag around on top of both bag loops.
- **5.** Lower the bag loops (with the bag wrapped around the loops) to secure the trash bag in the Waste Mate.
- **6.** Release the foot pedal to lower the lid.
- 7. Your Waste Mate is ready to use.





Removing the Trash Bag

- 1. Step on and hold the foot pedal to raise and hold the Waste Mate lid open.
- 2. Raise both bag loops and unwrap the trash bag from the bag loops.
- 3. Lift the trash bag from the Waste Mate and secure closed with twist-ties or other means.
- 4. Install a new trash bag following the steps above.

Cleaning Your Waste Mate

- When cleaning, only use a damp soft cloth or a plastic scouring pad for a cleaning cloth.
- Use a neutral dish soap or a mild non-abrasive detergent and lukewarm water.
- Do not use acetone, paint thinner, or other volatile solvents for cleaning.
- Do not use things that will scratch the surface, such as steel pads, wire brushes, and scrapers.
- For hard-to-clean spots, use standard household/vinyl cleansers and a soft bristle brush on troublesome spots or stains. Pre-soak heavy, dried-on soil if needed.
- If used in food preparation areas, clean frequently to avoid build-up.





Waste Mate Trash Bag Installation and Cleaning Instructions

This instruction sheet is for use with the following Waste Mate Plastic Trash Can models:

WM-8BEG	WM-8BLK	WM-8BLU	WM-8GRN	WM-8GRY	WM-8RED	WM-8WHT	WM-8YEL
WM-13BEG	WM-13BLK	WM-13BLU	WM-13GRN	WM-13GRY	WM-13RED	WM-13WHT	WM-13YEL
WM-18BEG	WM-18BLK	WM-18BLU	WM-18GRN	WM-18GRY	WM-18RED	WM-18WHT	WM-18YEL
WM-24BEG	WM-24BLK	WM-24BLU	WM-24GRN	WM-24GRY	WM-24RED	WM-24WHT	WM-24YEL



DETECTO

102 E. Daugherty, Webb City, MO 64870 USA

Ph: 417-673-4631 or 1-800-641-2008

Fax: 417-673-2153 www.Detecto.com

Technical Support: 1-866-254-8261

E-mail: tech@cardet.com