



Installation Instructions for P150 Printer Wall Mount Kit

Unpacking

Before starting to assemble, please unpack and remove all wrappings and fillers. Carton contains:

Item Description	Part Number	Qty.
P150 Thermal Tape Printer, RS232 Interface	6600-0155	1
Wall Mount Kit for P150 Printer	8555-0558-0A	1

Tools Required

- 3/16" (5 mm) Twist Drill
- No. 2 Philips screwdriver



Mounting the Bracket on the Wall

The P150 Printer Wall Mount Kit, includes a bracket mounting template, two #10 (5 mm) screws and wall anchors for mounting the bracket to the wall, and a thumbscrew and lock washer for securing the printer to the bracket. After the two anchors and screws have been installed in the wall, the bracket is easily attached to the wall by sliding the slotted holes in the bracket over the screws.

When choosing a location to mount the printer, make certain the wall is of sufficient strength to support the printer, and that it will not be in the way of normal traffic. Choose a location free of temperature extremes, water, not in direct sunlight, and within easy reach of the operator.

Follow the instructions below to mount the display on the wall.

1. Place the template from the pack against the wall, and mark the holes to drill.
2. Remove the template, and drill two 3/16" (5mm) holes in the wall for the anchors.
3. Insert the two wall anchors from the pack into the drilled holes, and push them in until they are flush in the wall.
4. Insert the two screws from the pack into the wall anchors and tighten them until there is approximately 1/8" (3 mm) gap between the screw head and anchor.
5. Place the large end of the slotted holes in the bracket over the screw heads, and gently pull down to attach the bracket to the wall.
6. Insert a Philips screwdriver through the openings in the front of the bracket and tighten the two screws to secure the bracket to the wall.





Installation Instructions for P150 Printer Wall Mount Kit

Installing the Printer in the Wall Mount Bracket

The P150 Printer is held in place in the Wall Mount Bracket by two fingers and secured to the bracket by a thumbscrew and lock washer. The following steps will guide you through installing the printer to the wall mount bracket.


1. After mounting and securing the bracket to the wall, place the printer in the bracket with the bottom flat edge of the printer back aligned with the bottom edge of the bracket.
2. Push down on one side of the printer, and then the other side until the printer back is completely down against the bracket.
3. Adjust the position of the printer in the bracket until the hole in the bracket is aligned with the threaded hole on the printer back, and then insert the thumbscrew with lock washer through the hole in the bracket and into the threaded hole on the printer back.
4. Finger-tighten the thumbscrew to secure the printer to the bracket.

Push down on each side of printer until printer back is down against bracket.

Place printer in bracket and align bottom edge of bracket with flat edge on printer back.



Adjust printer in bracket until hole in bracket is aligned with threaded hole on back of printer and insert thumbscrew and lock washer. Finger-tighten thumbscrew to secure printer to bracket.

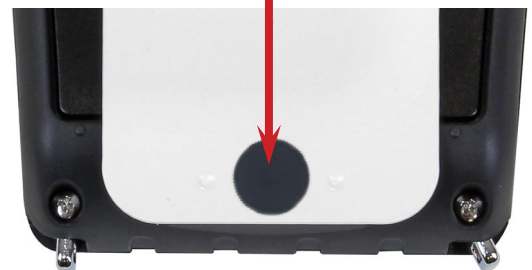

DETECTO

102 E. Daugherty, Webb City, MO 64870 USA

Ph: 417-673-4631 or 1-800-641-2008

Fax: 417-673-2153

www.Detecto.com

Technical Support: 1-866-254-8261

E-mail: tech@cardet.com