



REVISION RECORD			
LTR	DESCRIPTION	DATE	BY

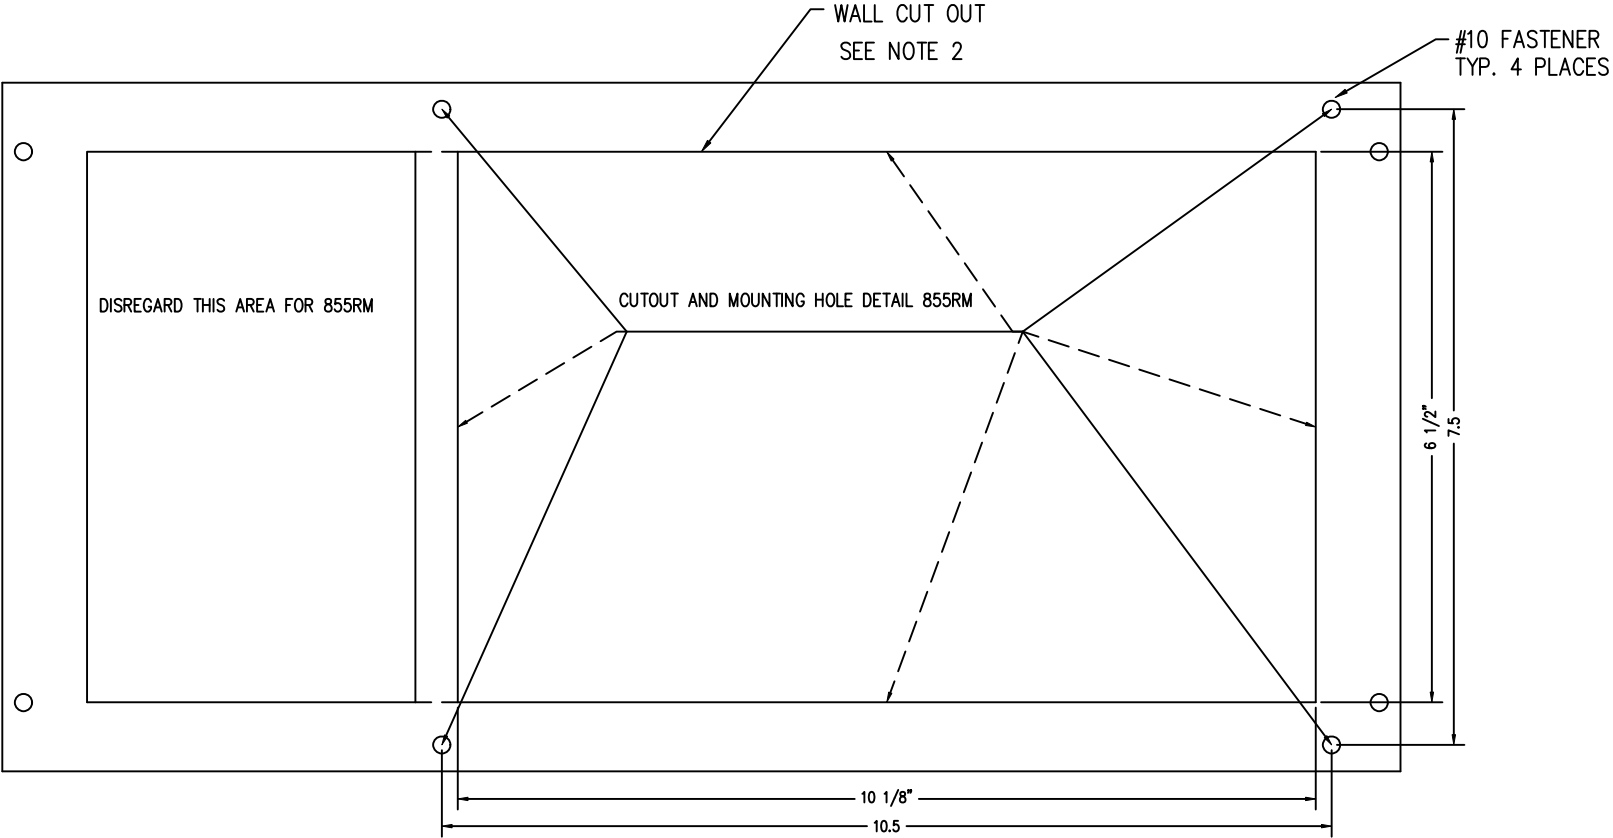

- MOUNTING INSTRUCTIONS
1. CHOOSE YOUR LOCATION, MUST HAVE 14 1/2" MIN. BETWEEN STUDS.
 2. USE TEMPLATE PROVIDED, OR CUTOUT DETAIL TO LAYOUT OPENING TO BE CUTOUT AND TO MARK MOUNTING HOLE LOCATIONS.
 3. STANDARD 120 VAC WILL BE REQUIRED, WIRE PER LOCAL CODES.
 4. GROUNDING REQUIRED, GROUND PER LOCAL CODES.
 5. USE TEMPLATE 8555-C465-08.

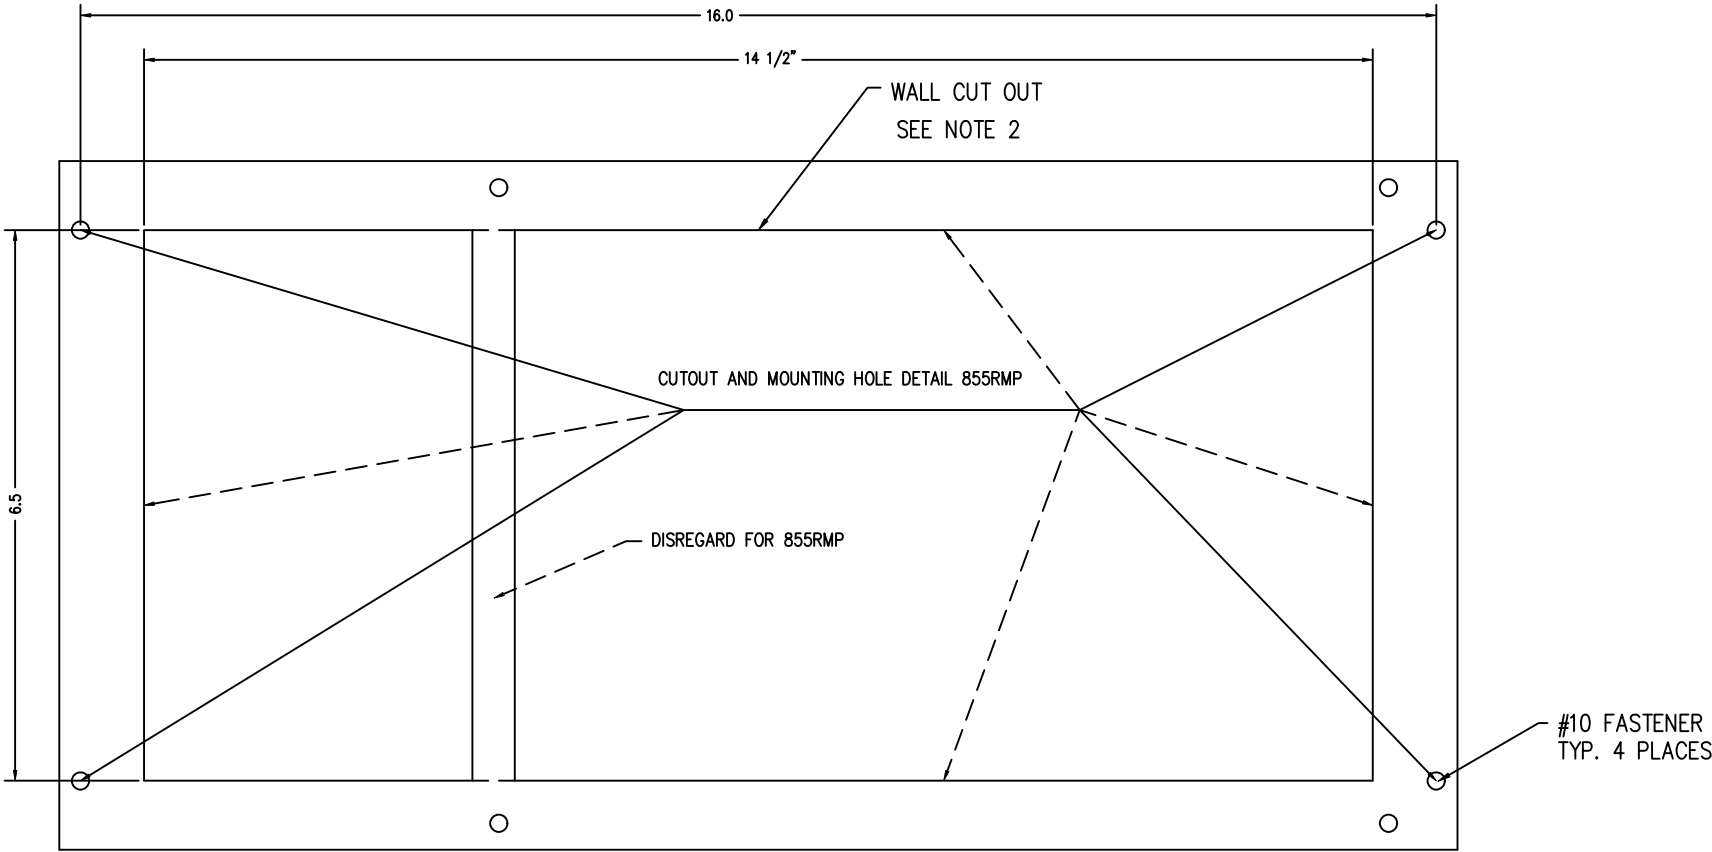

QTY.	QTY.	QTY.	ITEM	PART/DWG.	DESCRIPTION	MATERIAL OR	WT.
			ASSY	NUMBER		SOURCE	EACH
			WT.	PARTS/MATERIAL LIST			
UNLESS OTHERWISE SPECIFIED TOLERANCE ON DIMENSIONS ARE: ANGLES ± 1/2° INTEGERS/FRACTIONS ± 1/16 IN. DECIMALS (.X) ± .03 IN. DECIMALS (.XX) ± .01 IN. DECIMALS (.XXX) ± .005 IN. NOTE: WHOLE NUMBERS MUST BE WRITTEN XX.000 TO INVOKE DECIMAL TOLERANCES.				 CARDINAL CARDINAL DETECTO BELT-WAY			
THIS DRAWING IS THE PROPERTY OF THE CARDINAL SCALE MFG. CO. AND SHALL NOT BE USED NOR REPRODUCED EITHER WHOLLY OR IN PART EXCEPT WITH WRITTEN AUTHORIZATION. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.				TITLE CUTOUT DETAILS 855RM/855RMP			
SCALE NTS		DO NOT SCALE DRAWING		NEXT ASSEMBLY			
DR. GPL		DATE 1/13/17		D			
CH.		DATE					
MODEL ID-XXXX-XXX		SHEET 1 OF 1		DWG. NO. 1914-0044-GS		REV. A	