



## C Series | Portable Counting Scales



Simultaneously  
Displays Total Weight,  
Unit Weight, and  
Piece Count

Cardinal Scale  
model C100  
counting scale



### Second Scale Input Port

- 30 lb/15 kg, 65 lb/30 kg, 100 lb/50 kg Models Available
- Rechargeable Battery Pack Included for Mobile Weighing
- Sturdy Stainless Steel Platform for Long-Lasting Durability
- Effortless Keypad Data Entry - Numerical Keyboard
- Piece Counts with Known and Unknown Weight Samples
- Backlit Blue LCD for Readouts in Low Lighting
- Preset Weight and Quantity Limits with Alerts
- Up to 99 Stored Product Look Ups
- Audible Beep Confirmation (may be disabled)
- Sleep Mode for Extended Battery Life



C100 counting scale with EH-544 floor scale connected as a remote base



C100 counting scale with RW-1000 floor scale connected as a remote base




**Cardinal Scale's C series scales** with rechargeable battery are ideal for inventory counting where mobility is a must!

These durable counting scales feature a full keypad to enter and recall known piece weights and tare weights, metric conversion, large backlit single LCD, bubble level, and non-skid feet for stability.



Product look up preset keys speed counting operations

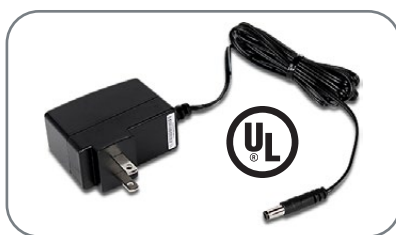

AC adapter included (UL listed for the U.S. and Canada)



Includes second scale input port (remote scale only)

Model:	C30	C65	C100
Capacity:	30 lb x 0.002 lb / 15 kg x 1 g	65 lb x 0.005 lb / 30 kg x 2 g	100 lb x 0.01 lb / 50 kg x 5 g
Weight Resolution:	1 part in 15,000		
Counting Resolution:	1 part in 300,000		
Power:	Built-in rechargeable 6V/4Ah battery or 12VDC / 110~240 VAC 50/60Hz usULc AC adapter (included)		
Scale Construction:	ABS plastic		
Overall Dimensions:	13.5 in L x 13.6 in W x 4.9 in H / 34.3 cm L x 34.5 cm W x 12.4 cm H		
Platform Construction:	Stainless steel		
Platform Dimensions:	12.8 in L x 9.1 in W x 0.6 in H / 32.5 cm L x 23.1 cm W x 1.5 cm H		
Display Type:	Seven-segment, backlit blue LCD • WEIGHT: 6 digits • Average Piece Weight: 6 digits • PIECES: 6 digits Individual Digit Size: 0.3 in W x 0.5 in H / 7.6 mm W x 12.7 mm H		
Display Dimensions:	2.4 in W x 2.1 in H / 6.1 cm W x 5.3 cm H		
Humidity:	25% ~ 95% RH		
Temperature Range:	32° ~ 104° F / 0° ~ 40° C		
Zero:	Established on power-up routine and maintained by auto-zero circuitry		
Port:	Second scale input port (remote scale only)		
Weights:	Product Weight: 7.6 lb / 3.4 kg • Shipping Weight: 10.1 lb / 4.6 kg		
UPC Code:	809161193701	809161193800	809161302905

Cardinal Scale reserves the right to improve, enhance or modify features and specifications without prior notice. All registered trademarks are the property of their respective owners.



102 East Daugherty St., Webb City, MO 64870 USA  
Toll-Free: (800) 441-4237 E-mail: cardinal@cardet.com  
www.CardinalScale.com

**SOLD BY:**