

DETECTO®

DL SERIES

PRICE COMPUTING SCALES with Integral Label Printing




DL1030



DL1030P

- Networkable price computing and label printing scale
- 5,990 PLUs (highest in the industry out of the box)
- 30 lb x 0.01 lb or 60 lb x 0.02 lb capacity
- Integrated thermal label printer
- Available with or without tower pole display
- 12.8 in W x 8.9 in D stainless steel platform
- Inventory reporting capabilities by PLU
- Alphanumeric display (upper and lower case characters)
- NTEP legal-for-trade certified
- 4 LED display windows and 1 dot matrix text screen

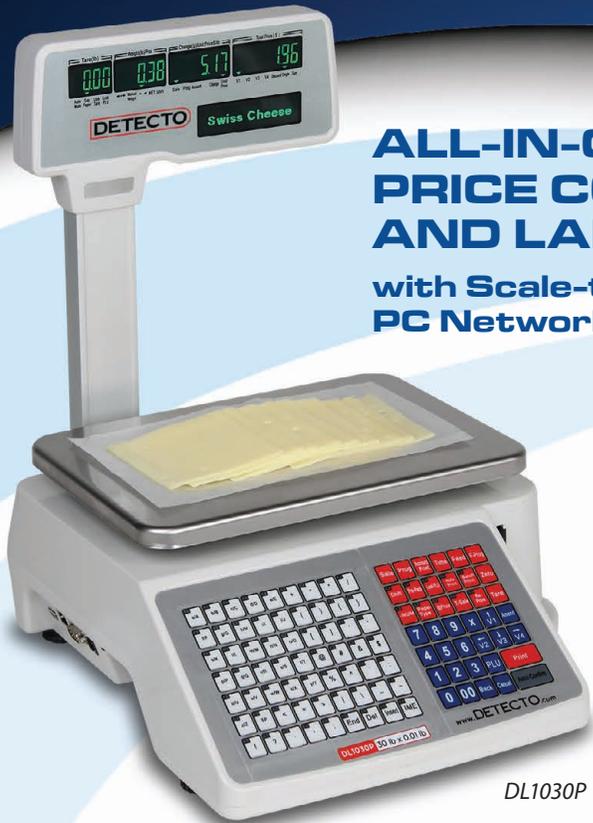

DL1030P

ALL-IN-ONE PRICE COMPUTING AND LABEL PRINTING SCALE

with Scale-to-Scale and
PC Networking Capabilities

VIVID DISPLAY

Bright green, easy-to-read LED display readouts ensure visual accuracy for both the operator and the customer. The 5-window display includes 1 dot matrix message display.

- Economical NTEP scale with high-end features
- Communication is easy with built-in Ethernet, RS232 serial, and USB
- Quick and easy loading of receipt paper or label rolls

DETECTO's versatile DL series price computing scales with integral label printers are designed for highly-customizable retail use in delis, supermarkets, produce sections, convenience stores, and grocery store meat sections. With 5,990 PLUs and 2-MB memory, the DL series is economical, durable, user-friendly and incorporates all of the essential features needed for legal-for-trade weighing and label printing.



Label Rolls Available from DETECTO in Single Rolls or by the Case



DL1030P/DL1060P
Customer View



DL1030/DL1060
Customer View

CUSTOMER VIEW LCDs

The LED dual display allows for easy viewing for both the operator and the customer providing product and pricing information.

Function Keys


- Equipped with 5990 PLU's
- Pole Display: 103 keys – including 63 speed keys; Rear Display: 78 keys – including 40 speed keys
- Fast program key to modify frequently-used settings such as:
 - Label, date, and time formats
 - Label/paper type
 - Communication parameters

Security

- Programming password protected optional

PLU – Direct Price Editing

- User selectable fields

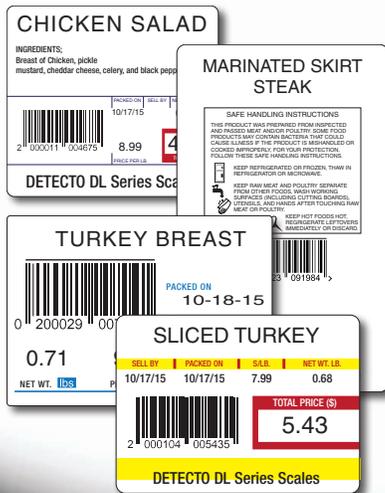

DETECTO's DL series prints labels in a wide variety of styles, sizes, and printed information: bar codes, QR codes, safe handling images, ingredients, weights, date formats with month/day or time, nutritional facts, discounts, logos, and more.

50 label types available via included software with the DL series.





INCLUDES PC SOFTWARE CD

Flexible and easy-to-use PC software with drag-and-drop graphics set-up:


- Over 50 label types are available to set up via included software
- Simplified exporting and importing PLUs to and from Excel
- Full control over PLU data
- Easy firmware USB upgrades using USB drive (flash memory) with no need to break the NTEP inspection seal
- Full back up of all specifications (duplicates a scale's setup in minutes)

DETECTO's DL retail scale is as intuitive to set up as it is to use, simplifying both management and employees tasks. The scale comes with versatile PC set-up software and networking capabilities allowing you to make updates to multiple scales for your facility. Customized reporting features provide you with all the information you require to make your accurate business decisions for your store.

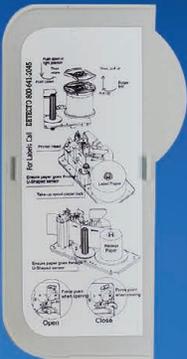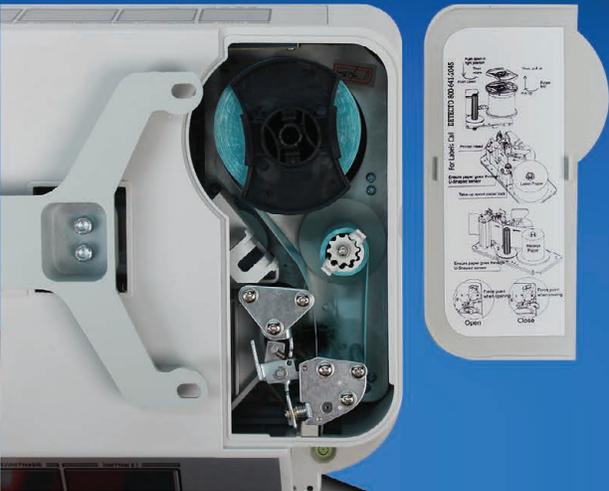


INTERNAL EASY-ACCESS PRINTER

- Space-saving compact design
- Gap and continuous thermal paper
- Fully customizable labels or receipts
- Stores up to 15 black-and-white bitmap images to customize your labels, including QR codes and store logos
- Scale is preprogrammed to use DETECTO stock labels
- Printed reports for different time periods and classifications
- Bar code flexibility: 9 kinds of default bar code settings
- Crisp, clear printouts
- Capable of printing ingredients, nutritional facts (USA and Canada ready), safe handling instructions, storage instructions, allergy warnings and logos, cooking instructions and recipes

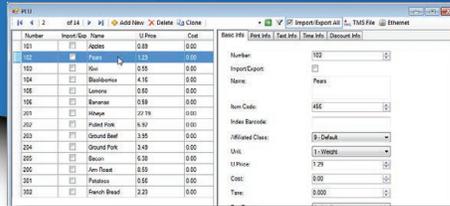


Each PLU can easily be created, viewed, and modified within the DLX50 utility. PLUs created at the scale can be imported to the utility and viewed/modified as well.

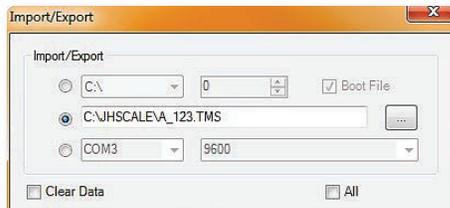


PLU and setup information can be imported and exported via RS232, USB, or Ethernet at the click of a button.



Custom bitmap graphics can be loaded onto the DL Series scales for use in label printing.

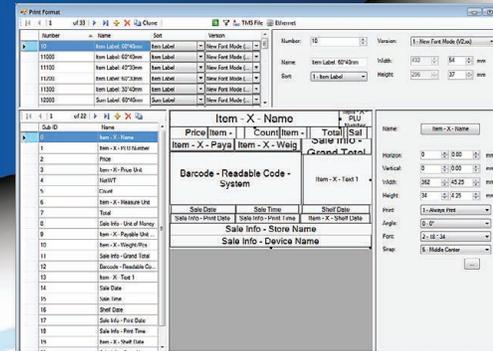

Labels have fully customizable layouts and font sizes by use of this user-friendly graphic interface.

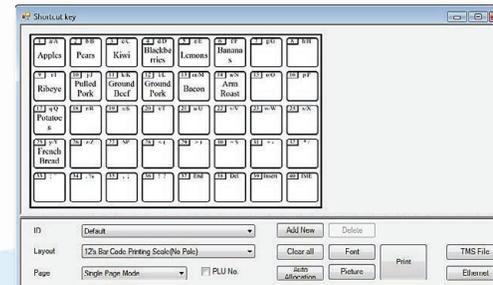


This graphic display allows PLUs to be quickly assigned to quick keys. This page can then be printed and used as the quick key overlay for the DL Series scale.



The DL series scales' USB drive allows you to download PLUs, shortcut keys, and other setup information, including custom labels, to the scale. Upload these same items from the scale to the USB drive which can be viewed in the included utility software.

Extensive Connectivity Available

The DL Series comes with four communication ports to accommodate the interface requirements of various integration communication setups.

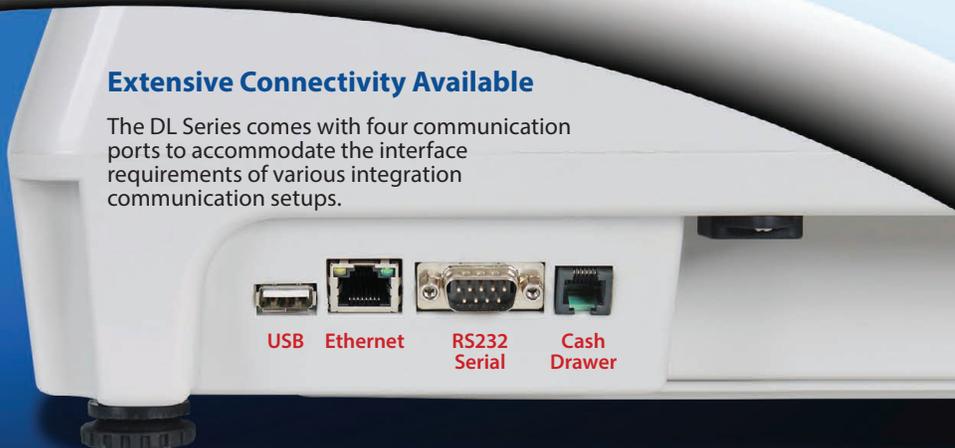



DETECTO

DL Series
Price Computing Scale
with Integral Printer
Operation Manual

8529-0037-2M Rev A
11/15

PO BOX 151 • WEBB CITY, MO 64870
PH (417) 673-4633 • FAX (417) 673-5001
www.detecto.com

Technical Support: Ph: 800-254-8251 • tech@cardet.com



Includes:

- Scale (and tower display on models DL1030P/DL1060P)
- Operation manual
- DL series set-up utility CD for PC software
- Four (4) overlays for PLU shortcuts
- AC power cord



| Models | DL1030 | DL1060 | DL1030P | DL1060P |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| Tower Pole Display | | | ● | ● |
| Capacity | 30 lb X .01 lb | 60 lb X .02 lb | 30 lb X .01 lb | 60 lb X .02 lb |
| Display | Front – 4 seven-segment LED screens and 1 dot matrix text screen (with upper and lower case characters); Back: 4 seven-segment LED screens | | Front – 4 seven-segment LED screens and 1 dot matrix text screen (with upper and lower case characters); Back: 4 seven-segment LED screens and 1 dot matrix text screen (with upper and lower case characters) | |
| Display Digits | 4 digit Tare, 6 digit Unit Price, 5 digit Weight, 6 digit Total Price | | | |
| Max PLU | 5,990 PLU's | | | |
| Total Keys | 89 | | 103 | |
| Speed Keys | 40 (doubles to 80 when pressing SHIFT + the quick key for a second PLU from the same key) | | 63 (doubles to 126 when pressing SHIFT + the quick key for a second PLU from the same key) | |
| Measurement Type | Load Cell | | | |
| Printer | Thermal Print | | | |
| Label Size | Width: 40 mm – 60 mm; Length: 128 mm | | | |
| Interface | USB, Ethernet, RS232 serial, and cash drawer port | | | |
| Power Source | 120VAC, 50-60 Hz (AC power cord included) | | | |
| Operating Temperature | 32° F – 104° F / 0° C – 40° C | | | |
| Operating Humidity | 15% - 85% relative humidity non-condensing | | | |
| Construction | Stainless steel platform and ABS plastic scale enclosure | | | |
| Platform Size | 12.8 in W X 8.9 in D / 32.5 cm W X 22.6 cm D | | | |
| Overall Dimensions | 13.8 in W x 15.5 in D x 6.8 in H / 35.1 cm W X 39.4 cm D X 17.3 cm H | | 13.8 in W x 17.4 in D x 18.1 in H / 35.1 cm W X 44.2 cm D X 46 cm H | |
| Minimum Weight | 0.2 lb per NTEP | | | |
| Certification | NTEP legal for trade certified | | | |
| Product Net Weight | 13.4 lb / 6.1 kg | | 15.1 lb / 6.8 kg | |
| Shipping Weight | 15.4 lb / 7 kg | | 17 lb / 7.7 kg | |
| UPC Codes | 809161199406 | 809161199604 | 809161199505 | 809161199703 |

DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.

SOLD BY:



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 641-2008 E-mail: detecto@cardet.com
www.Detecto.com