



## —— DM15 Price Computing Scale

- 240 oz x 0.1 oz / 15 lb x 0.005 lb
- Ideal for Retail Frozen Yogurt, Ice Cream, Coffee Beans, Nuts, and Candy Stores
- Up to 99 Easy-to-Add PLUs for Quick Reference (14 direct and 85 indirect)
- Displays Weight, Unit Price, and Total Price with Operator and Customer Views
- RS232 Serial Port Standard Provides Label Printer Connectivity



DETECTO's low-profile DM15 price computing scale offers up to 99 easy-to-add PLUs for fast reference (14 direct quick keys and 85 indirect PLUs). The DM15 displays Weight, Unit Price, and Total Price on the front and rear backlit LCDs (up to six 0.5-in / 13-mm high digits) for both the operator and customer to view simultaneously. The DM15 offers accurate and reliable weighing for farmers markets, delis, bakeries, candy kiosks, coffee shops, convenience stores, produce markets, and hardware stores. Auto Shut-off, Sleep, and Backlight Off modes extend the retail scale's battery life.


The NTEP legal-for-trade scale's Pre-Pack key saves time by retaining the Unit Price and Tare for repetitive price computing, making the operator's job even faster. Adjustable, nonskid feet and internal bubble level ensure steady and accurate weighing, plus a beep provides audible confirmation of key presses. Ideal for the retail frozen yogurt and ice cream industry, the weighing capacity is 240 ounces by 0.1 ounce accuracy (15 lb x 0.005 lb). The high-grade, molded polymer enclosure with color-coded sealed membrane keypad and lift-off, wash-down stainless steel platform make cleaning easy.





## Rechargeable Battery Pack for Cordless Use in Kiosks and Farmers Markets

DETECTO's DM15 price computing scale offers a dual power source of rechargeable battery pack and 110/120VAC 50/60 Hz adapter (included). Charge it up and it will last 120 working hours of continuous use with the backlight turned off.

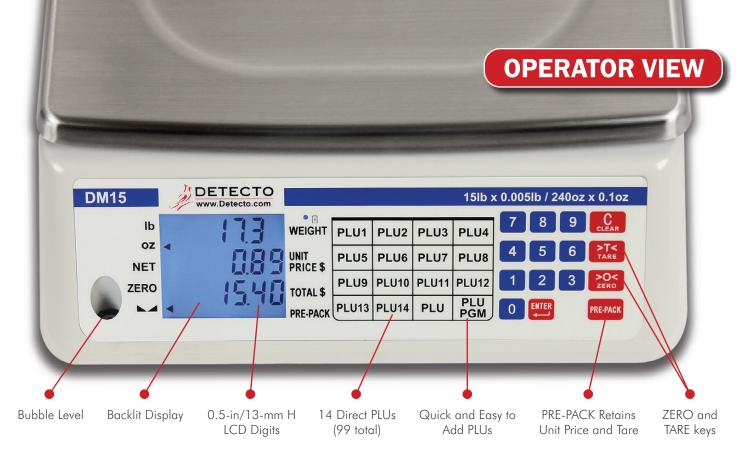













Weight, Unit Price, and Total Price Shown Simultaneously on the Front and Back Operator and Customer Displays



## **DM15**

## Price Computing Scale

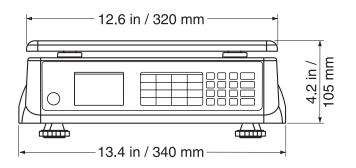

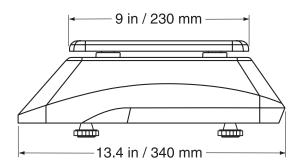

Model	DM15
Capacity	240 oz /15 lb
Divisions	0.1 oz / 0.005 lb
UPC Code	809161191103
Display	0.5-in/13-mm high, 7-segment LCD with backlight Weight: 6 digits Unit Weight: 6 digits Total Price: 6 digits
Power	12 VDC 1.0A rechargeable battery pack (included) or AC adapter 110/120 VAC 50/60 Hz (included)
Battery Operation	120 working hours of continuous use without backlight turned on $/$ 60 hours with backlight turned on
Leveling Components	4 adjustable rubber feet and integral front-mounted level bubble indicator
PLU	Up to 99 Price Look Ups (14 direct quick keys and 85 indirect)
Zero	Established on power up routine and maintained by auto-zero circuitry
Tare	100% of full scale capacity
Operating Temperature	14° to 104° F (-10° to +40° C)
Storage Temperature	-13° to 122° F (-25° to +50° C)
Scale Construction	High-grade molded polymer
Platform Construction	Stainless steel
Product Weight	7.9 lb / 3.6 kg
Shipping Weight	11.4 lb / 5.2 kg
NTEP	Certificate of Conformance No. 13-058
Accuracy Class	III
Connectivity Port	RS232 serial
Optional Accessories	P225 direct thermal label printer, 7100-0026 label roll, and 7100-0025 serial cable

Detecto Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.

A Division of Cardinal Scale Manufacturing Co.

102 E. Daugherty, Webb City, MO 64870 USA
Ph: 417-673-4631 or 1-800-641-2008 Fax: 417-673-2153

www.Detecto.com

**SOLD BY:**