


# DETECTO®

## PORTABLE DIGITAL FLOOR SCALES

### DR150 | DR400

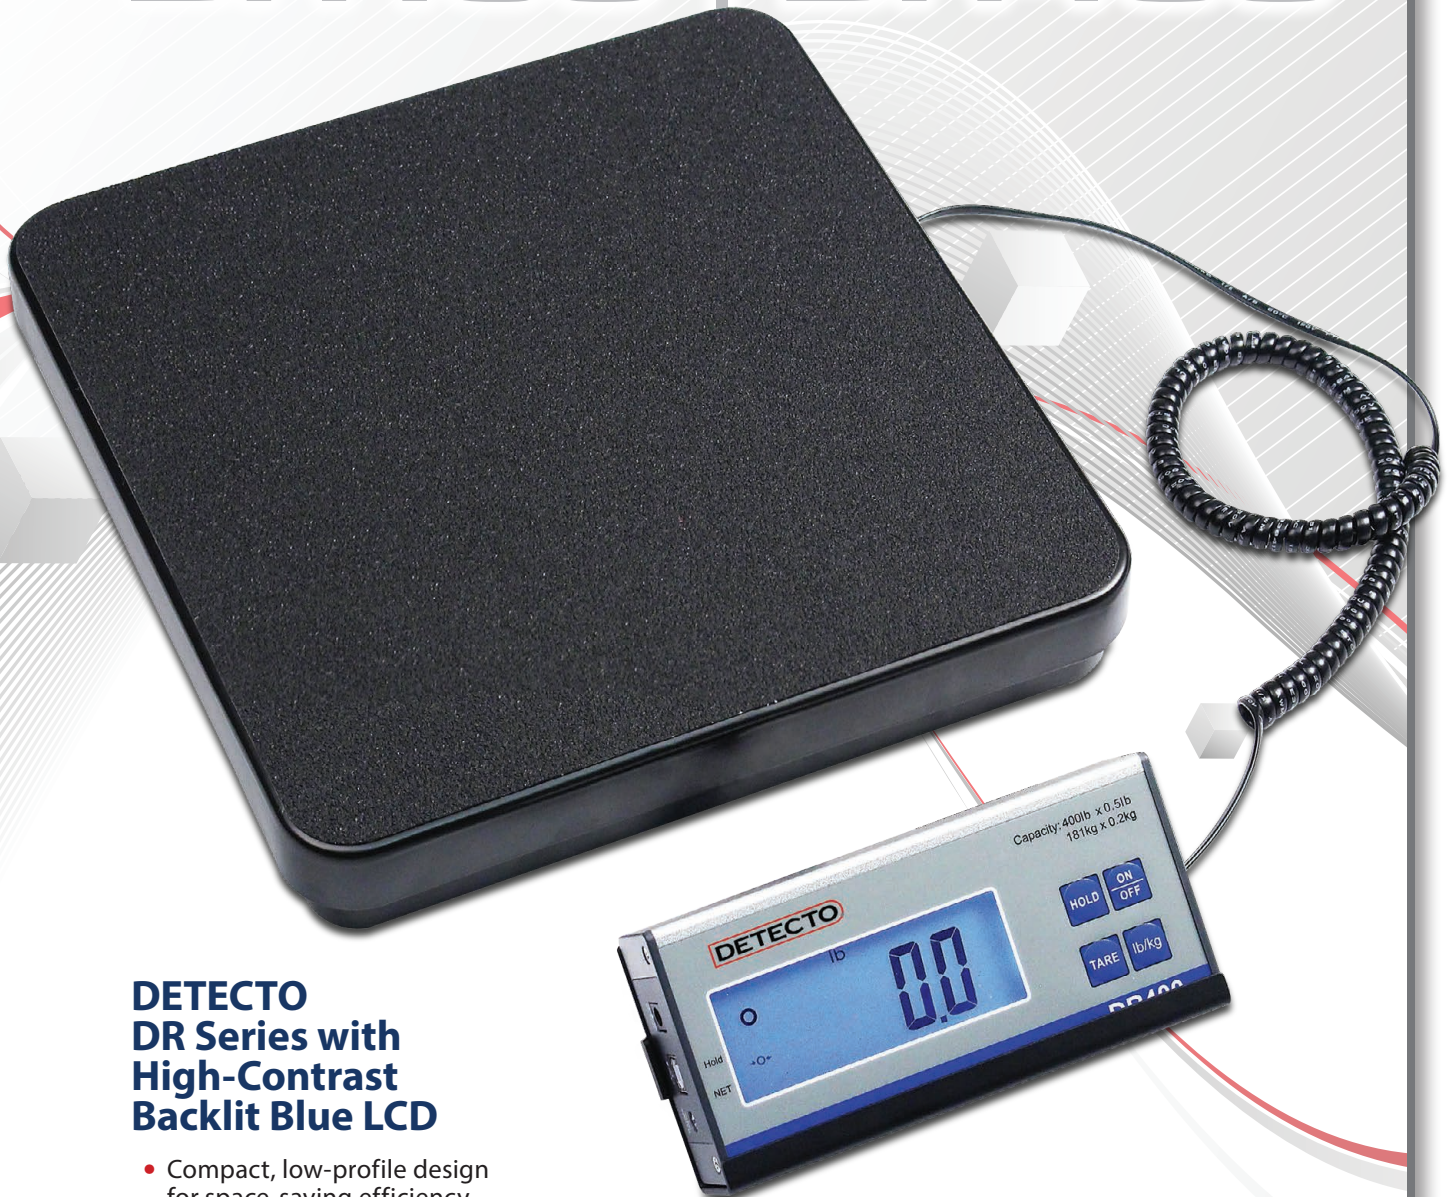

### DETECTO DR Series with High-Contrast Backlit Blue LCD

- Compact, low-profile design for space-saving efficiency
- Coiled cable from scale base allows versatile positioning of the indicator
- Slip-resistant, texturized black rubber mat for traction
- 150 lb x 0.2 lb / 68 kg x 0.2 kg and 400 lb x 0.5 lb / 180 kg x 0.2 kg models available

# DIGITAL RECEIVING SCALES



2.2-in/5.6-cm high, low-profile platform for easy portability

## FLAT CONSTRUCTION AND SLIP-PROOF SURFACE FOR WEIGHING PRODUCTS OR PEOPLE

The portable lightweight platform and large bold backlit blue readouts make this scale ideal for receiving departments, warehouses, distribution centers, and general purpose weighing. The scale's moveable display lets you place it on a work surface or mounted to the wall, wherever it's most convenient for you to view. An optional black carrying case is available.



DETECTO's model DR150 and DR400 digital portable floor scales will provide you with years of accurate and reliable weighing from the brand you trust. The scales arrive assembled and ready for use.

- Battery or AC power for your convenience
- Lightweight, mobile weighing platform for easy transport
- Auto Shut-Off after 2 minutes conserves battery power
- Simple four-key operation is easy to use even for novices
- Pushbutton Tare will zero out the load on the platform
- Pounds and kilograms conversion with Units key
- Removeable steel platform that is durable and easy to clean

## Raised buttons and audible beep confirmation of keypresses

The economical DR150 and DR400 are battery powered, so you can take the scales anywhere you need them. The raised buttons are comfortable to press for a pleasant tactile feel, and an audible beep provides a confirmation of your keypresses. The backlit blue LCD with bold one-inch-high digits is viewable in almost any lighting condition.



**DETECTO**

# IDEAL FOR GENERAL PURPOSE TYPE WEIGHING USE



## Floor/ Tabletop Display

### Mobile Positioning

The bracket can temporarily rest on any flat surface for mobile weighing.



## Wall Mount Display

### Fixed Positioning

Two mounting screws and two plastic drywall anchors are included for the mounting bracket.



## Versatile Display Options

The DR series indicator's versatile drop-in mounting bracket and coiled cable allows the display to be positioned on the floor or tabletop for quick mobile weighing use or you may permanently mount it on the wall using the

included screws and plastic drywall anchors. Wall-mounting the remote display offers the additional advantage of eye-level readings and space-saving operation, which is important when weighing larger type items.



# EXCELLENT FOR USE WHERE SPACE IS LIMITED



## Battery or AC Power

DETECTO's DR150 and DR400 come with a UL listed 9V 300mA DC adapter (included) or may be powered by 4 AA batteries (not included) for mobile use.

Easy access to 4 AA batteries located conveniently on the back of the indicator.



Four non-skid feet for weighing stability.

# PORTABLE DIGITAL GENERAL PURPOSE SCALES



## OPTIONAL



Model  
GBSS18-WM

### Wall-Mount Grab Bar

Stainless steel  
wall-mount  
support handles  
(ordered 1 bar  
per model)



Model  
DR-CASE

### Carrying Case

Black carrying  
case with handle  
and zipper for the  
models DR150  
and DR400

**Includes:** DR series scale with coiled cable to indicator, mounting bracket, DC adapter, operation manual, and two mounting screws and two plastic drywall anchors.



	DR150	DR400
<b>Capacity</b>	150 lb x 0.2 lb / 68 kg x 0.1 kg	400 lb x 0.5 lb / 180 kg x 0.2 kg
<b>Scale Base Platform Dimensions</b>	12.5 in W x 11.9 in D x 2.2 in H / 318 mm W x 303 mm D x 58 mm H	
<b>Weight Indicator Dimensions</b>	6.8 in W x 1.6 in D x 3.2 in H / 172 mm W x 40 mm D x 82 mm H (minus bracket)	
<b>Scale Base Platform Construction</b>	Mild steel painted black with textured black rubber mat	
<b>Keys</b>	ON/OFF, HOLD, TARE, lb/kg	
<b>Display Annunciators</b>	Stable weight, Negative weight, Hold, Net, kg, lb, Low battery	
<b>Features</b>	Backlight, low battery indicator, power-saving selectable timing auto shut-off, beeper, printer output	
<b>Display Type</b>	Liquid Crystal Display, 5 digit, 7 segment	
<b>LCD Display Dimensions</b>	3.8 in W x 1.4 in H / 96 mm W x 35 mm H overall LCD size	
<b>LCD Digit Dimensions</b>	1 in H x 0.4 in W / 25 mm H x 10 mm W per digit	
<b>Cable Length</b>	Coiled	34 in / 863 mm
	Fully Extended	90 in / 2,286 mm
<b>Power</b>	9V DC 300mA power supply or (4) AA alkaline batteries (not included)	
<b>Tare</b>	100% of full scale capacity	
<b>Zero</b>	Established on power up routine and maintained by auto-zero circuitry	
<b>Operating Temperature</b>	41° F to 95° F (5° C to 35° C)	
<b>Operating Humidity</b>	35% ~ 90% RH	
<b>Net Weight</b>	10.5 lb / 4.8 kg	
<b>Shipping Weight</b>	12 lb / 5.4 kg	
<b>UPC Code</b>	809161130003	09161130102

DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.



102 East Daugherty St., Webb City, MO 64870 USA  
Toll-Free: (800) 641-2008 E-mail: [detecto@cardet.com](mailto:detecto@cardet.com)  
[www.Detecto.com](http://www.Detecto.com)

**SOLD BY:**