

DETECTO®

D series Price Computing SCALES



D30 price computing scale



P225 label printer

RS232 Serial Port Standard Provides Label Printer Connectivity

DETECTO's D series scales may be connected with the model P225 label printer via the 7100-0025 serial cable (not included) using 7100-0026 label rolls (not included).



- Up to 99 Easy-to-Add PLUs for Quick Reference (14 direct and 85 indirect)
- Built-in Rechargeable Battery Pack and AC Adapter Included
- NTEP Legal for Commercial Trade - Accuracy Class III
- Displays Weight, Unit Price, and Total Price with Operator and Customer Views



Fixed standard D series label output format



7100-0026 labels (optional)



7100-0025 RS232 serial cable (optional)




Detecto Model D30
Price Computing Scale

D series Price Computing SCALES

Easy-to-Read Backlit LCD Stainless Steel Washdown Platform

DETECTO's low-profile D series price computing scales offer up to 99 easy-to-add PLUs for fast reference (14 direct quick keys and 85 indirect PLUs). The D series displays Weight, Unit Price, and Total Price on the front and rear backlit LCDs (up to six 0.5-in / 13-mm high digits) for both the operator and customer to view simultaneously. The D series offers accurate and reliable weighing for farmers markets, delis, bakeries, candy kiosks, coffee shops, convenience stores, produce markets, and hardware stores. Auto Shut-off, Sleep, and Backlight Off modes extend the retail scale's battery life.


The NTEP legal-for-trade scale's Pre-Pack key saves time by retaining the Unit Price and Tare for repetitive price computing, making the operator's job even faster. Adjustable, nonskid feet and internal bubble level ensure steady and accurate weighing, plus a beep provides audible confirmation of key presses. Weighing capacities range from 15 lb x 0.005 lb / 6 kg x 0.002 kg up to 60 lb x 0.02 lb / 30 kg x 0.01 kg. The high-grade, molded polymer enclosure with color-coded sealed membrane keypad and lift-off, wash-down stainless steel platform make cleaning easy. The scale's RS232 serial port allows printer connectivity for label printing.

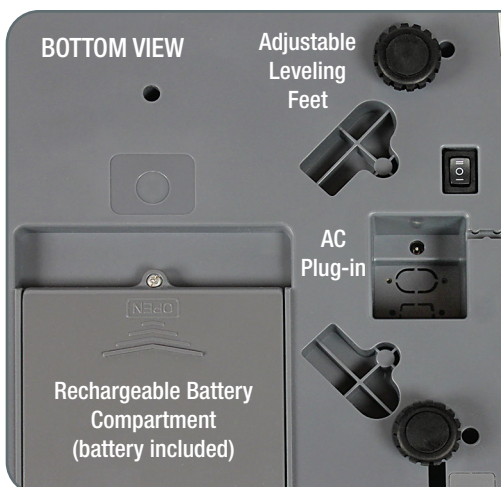

Rechargeable Battery Pack for Cordless Use in Kiosks and Farmers Markets

DETECTO's D series price computing scales offer a dual power source of rechargeable battery pack and 110/120VAC 50/60 Hz adapter (included). Charge it up and it will last 120 working hours of continuous use with the backlight turned off.

OPERATOR VIEW

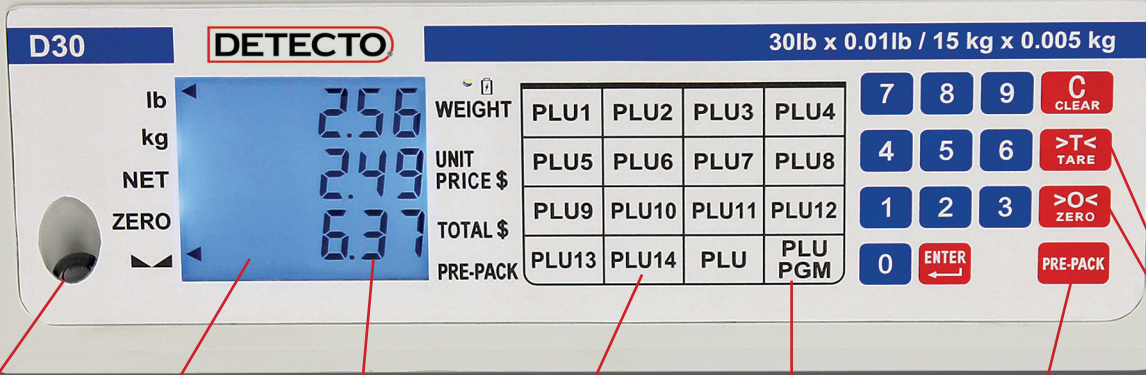

- Bubble Level
- Backlit Display
- 0.5-in/13-mm H LCD Digits
- 14 Direct PLUs (99 total)
- Quick and Easy to Add PLUs
- PRE-PACK Retains Unit Price and Tare
- ZERO and TARE keys





Weight, Unit Price, and Total Price Shown Simultaneously on the Front and Back Operator and Customer Displays

CUSTOMER VIEW

Displays up to 6 digits



D series Price Computing SCALES

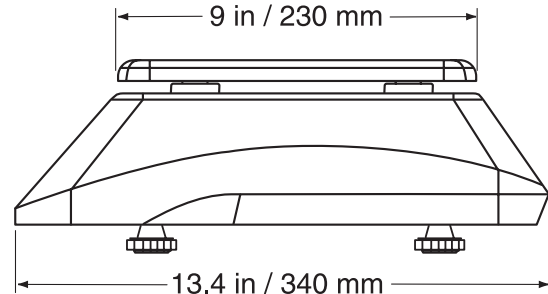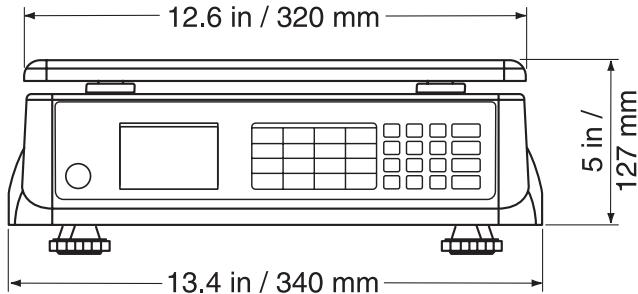

Model	DM15	D15	D30	D60
Capacity / Divisions	240 oz x 0.1 oz / 15 lb x 0.005 lb	15 lb x 0.005 lb / 6 kg x 0.002 kg	30 lb x 0.01 lb / 15 kg x 0.005 kg	60 lb x 0.02 lb / 30 kg x 0.01 kg
UPC Code	809161191103	809161190403	809161190502	809161190601
Display	0.5-in/13-mm high, 7-segment LCD with backlight Weight: 6 digits Unit Weight: 6 digits Total Price: 6 digits			
Power	12 VDC 1.0A rechargeable battery pack (included) or AC adapter 110/120 VAC 50/60 Hz (included)			
Battery Operation	120 working hours of continuous use without backlight turned on / 60 hours with backlight turned on			
Leveling Components	4 adjustable rubber feet and integral front-mounted level bubble indicator			
PLU	Up to 99 Price Look Ups (14 direct quick keys and 85 indirect)			
Zero	Established on power up routine and maintained by auto-zero circuitry			
Tare	100% of full scale capacity			
Operating Temperature	14° to 104° F (-10° to +40° C)			
Storage Temperature	-13° to 122° F (-25° to +50° C)			
Scale Construction	High-grade molded polymer			
Platform Construction	Stainless steel			
Product Weight	7.9 lb / 3.6 kg			
Shipping Weight	11.4 lb / 5.2 kg			
NTEP	Certificate of Conformance No. 13-058			
Accuracy Class	III			
Connectivity Port	RS232 serial			
Optional Accessories	P225 direct thermal label printer, 7100-0026 label roll, and 7100-0025 serial cable			

DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 641-2008 E-mail: detecto@cardet.com
www.Detecto.com

SOLD BY: