

DETECTO®

MARINER®

Submersible IP67

PORTION CONTROL SCALE



**Model
WPS12**

- 12-lb Capacity
- 0.1-oz Accuracy
- Stainless Steel
- Built-in Rechargeable Battery

Submersible Underwater



Smart, Rugged Design Saves Time and Money During Clean-up

Give Your Scale a Bath!

*Not commercial dishwasher safe

You can just dunk the scale into warm, soapy water and scrub it thanks to its waterproof design.


DETECTO's Mariner® IP67 washdown portion control scale is submersible underwater for easy clean up that is necessary in messy food service industry applications. The NSF Mariner® saves time and helps reduce the risk of bacteria harboring in the nooks and crannies of the scale by providing complete submersion when washing for sanitary environments. The scale's digital speed and accuracy means you'll be able to view weights instantly with up to a fine 0.1 ounce accuracy. The compact scale takes up only a conservative amount of counter space: 7.5 in W x 9.75 in D / 190.5 mm W x 247.5 mm D.

- Instantly Displays Weight in Both Decimals and Fractions
- 1.2-in/30-mm High Backlit LCD
- High/Low Checkweighing with Audible Over/Under Alert
- Tare Function to Remove the Weight of a Food Container
- Toggle Through Six Different Weight Capacity Display Options



DETECTO's Mariner® Portion Scale is a water resistant kitchen scale with a completely-sealed design.

MARINER

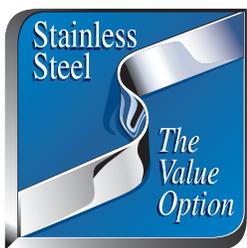

The all-stainless steel body prevents corrosion and keeps water from reaching its more delicate working parts.



RETAIL PACKAGING

The Mariner® comes in visually-attractive English/Spanish retail packaging to gain attention on highly-competitive store shelves

The WPS12 features an audible Over/Under alert for checkweighing and the clearly-visible 1.2-in/30-mm-high backlit blue LCD display offers large 1-in/25-mm-high bold digits. Settings can be adjusted for gravity compensation.

RECHARGEABLE BATTERY

The NSF-certified stainless steel scale offers a dual power source of rechargeable battery power or 100-240V AC adapter (included) with a watertight AC plug on the side. The automatic shutoff feature helps conserve battery life.

AC adapter and watertight rechargeable battery come with the Mariner®



Large 1-inch-high LCD Digits

Pounds-Ounces, Fractional Ounces, and More



Model	WPS12
Capacity - Increments	12 lb x 0.1 oz / 12 lb x 0.005 lb / 12 lb x 1/8 oz / 192 oz x 0.05 oz / 192 oz x 1/8 oz / 5,500 g x 1 g
Scale Dimensions	7.5 in W x 9.75 in D x 2.25 in H / 190.5 mm W x 247.5 mm D x 57 mm H
Platform Dimensions	7.5 in W x 6.75 in D / 190.5 mm W x 171.45 mm D
Display	1.2-in / 30-mm high backlit blue LCD, 5 digits
Digits	1-in / 25-mm high black LCD
Keypad Buttons	ON/OFF, UNITS/Backlight, SET, TARE
Power	AC Adapter (with US plug included): 100-240 VAC input, 9V @ 1A output Battery (included): Ni-MH rechargeable 4.8 VDC 1800 mA (Note: a plug adapter is required for international use)
Battery Life	80 hours of continuous use with a fully recharged battery pack
Feet	6 rubberized feet for traction
Tare	100% of full scale capacity
Zero	Established on power up routine and maintained by auto-zero circuitry
Temperature Operation	40° to 105° F (5° to 40° C)
Storage	40° to 140° F (5° to 60° C) Please Note: The Mariner® is not commercial dishwasher safe.
Enclosure Rating	IP67 submersible
Product Weight	3.6 lb / 1.7 kg
Shipping Weight	5 lb / 2.3 kg
UPC Code	809161194302

Detecto Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.

DETECTO®

102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 641-2008 E-mail: detecto@cardet.com
www.Detecto.com

SOLD BY: