


DETECTO®

STAINLESS STEEL DIGITAL PORTION SCALE

PS11

Ideal for restaurants, cafeterias, delis, salad bars, and pizza parlors

- 6.9 in W x 6.5 in D / 18 cm W x 17 cm D stainless steel platform
- 5 units of measure, including 5,000 g x 2 g and 11 lb x 0.1 oz
- Internal rechargeable battery pack included
- Digital speed and accuracy
- Portable and compact (only takes up minimal counter space)

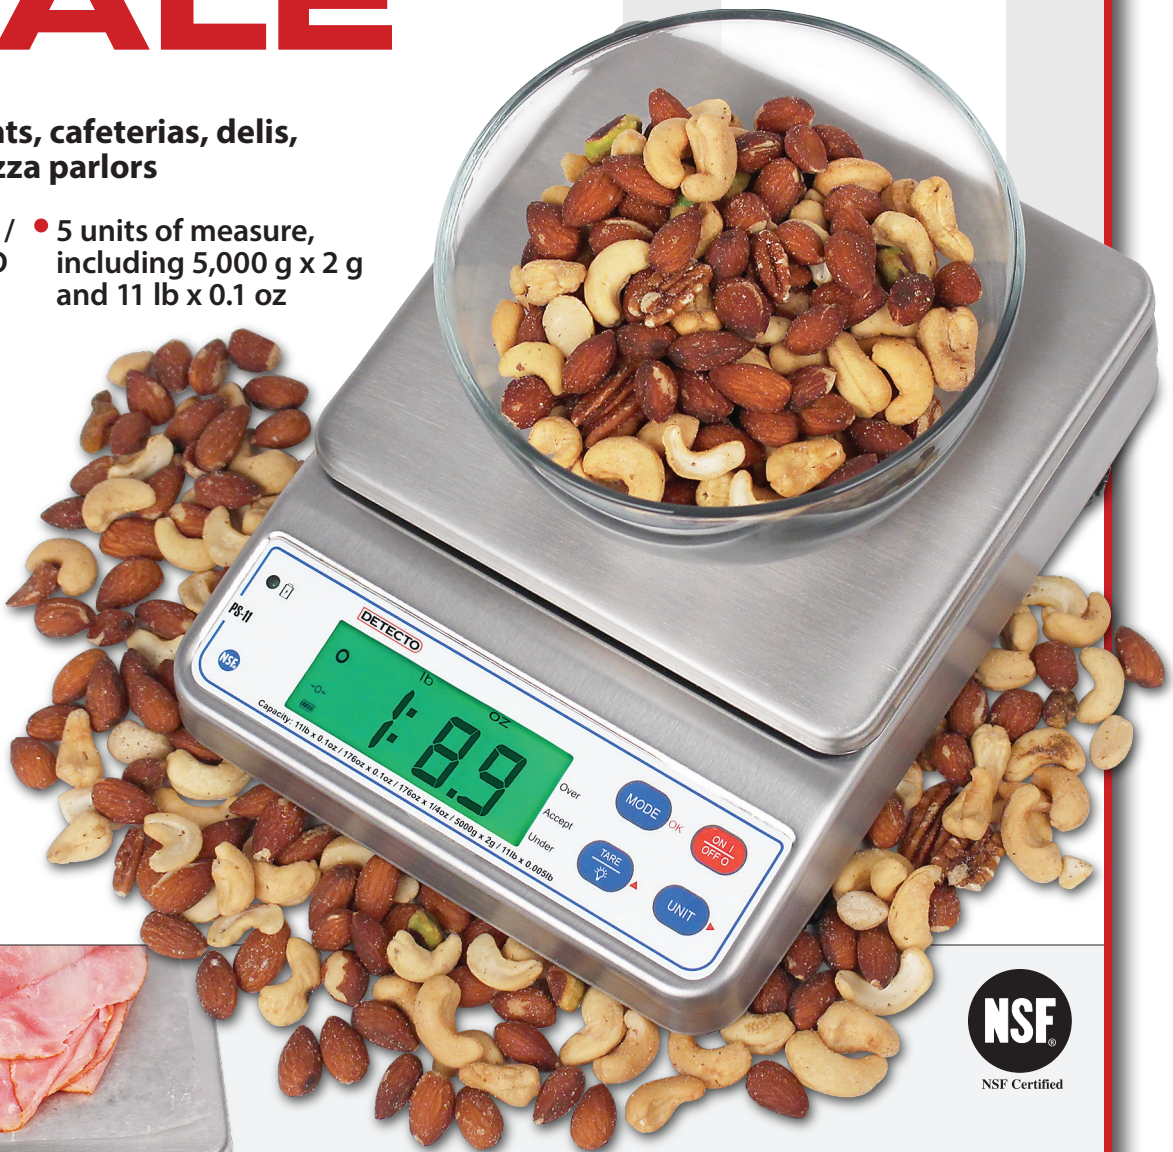

CHECKWEIGHING

LCD changes color based on Under/Accept/Over preset target weights that you select

DETECTO PS11



Bold, easy-to-read, 0.8-inch/20-mm high backlit LCD with checkweighing mode



Comes with UL/CSA-listed wall plug-in power supply and internal rechargeable battery pack

STAINLESS STEEL QUALITY AND DURABILITY

Stainless steel portion scale with stainless steel lift-off commodity tray

DETECTO's PS11 digital portion scale can be used wherever food is weighed, portioned, or dispensed. The PS11 offers five different units of measure and you can disable different units of measure if they are not needed. The display is angled upward for easy viewing. The display backlight will be turned on during weighing and will automatically turn off 5 seconds after the weight has been removed from the scale.

The scale's Tare feature lets you tare/zero the weight of a food container up to the full capacity of the scale. By using the checkweighing feature, you can select under and over weight limits for quickly checking food portion weights. The LCD will turn red for over weights, green for acceptable weights, and the backlit will turn off for under weights. Settings can be adjusted for gravity compensation. The PS11 comes in attractive retail packaging.

MODEL	PS11
Capacity	11 lb x 0.1 oz, 176 oz x 0.1 oz, 176 oz x 1/4 oz, 5000 g x 2 g, 11 lb x 0.005 lb
Overall Dimensions	7.48 in W x 9.84 in D x 2.17 in H / 190 mm W x 250 mm D x 55 mm H
Platform Size	6.9 in W x 6.5 in D / 175 mm W x 165 mm D
Construction	Stainless steel
Weight Display	0.8 in / 20 mm high backlit LCD, 5 digits with fraction
Zero	Established on power up routine and maintained by auto-zero circuitry
Power	Built-in rechargeable battery pack (7.2VDC/1200mA) or 115 VAC 50/60Hz or 230 VAC 50/60 Hz powering a 15 VDC 300 mA wall plug-in UL/CSA listed power supply
Battery Life	24 hours of continuous use with a fully charged battery pack
Tare (Zero)	100% of scale capacity
Temperature	40° to 105°F / 5° to 40°C
Humidity	25% ~95% RH
Features	Low battery indicator, power saving selectable timing, auto shut-off
Keys	ON/OFF, MODE/OK, UNIT/▶, TARE/✱/▲
Certification	NSF approved
Shipping Weight	6 lb / 2.7 kg
UPC Code	809161146103

- Auto Shutoff conserves battery life
- Simple, user-friendly, four-button operation
- NSF certified for food safety



NSF Certified

DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.

SOLD BY:



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 641-2008 E-mail: detecto@cardet.com
www.Detecto.com