

# DETECTO®

# DIGITAL PORTION SCALE PS7

Ideal for restaurants, cafeterias, delis, salad bars, and pizza parlors

- 8 in W x 5 in D / 20 cm W x 13 cm D stainless steel platform
- Internal rechargeable battery pack included
- Affordable price and high performance
- Portable and compact (only takes up minimal counter space)
- Optional oversized 9.5 in W x 6.8 in D platform available
- 5 units of measure, including 3,000 g x 1 g and 7 lb x 0.1 oz



## CHECKWEIGHING

LCD changes color based on Under/Accept/Over preset target weights that you select

# DETECTO PS7

COMPACT SIZE  
WITH **DIGITAL  
SPEED AND  
ACCURACY**



Bold, easy-to-read, 1-inch/25-mm high backlit LCD with checkweighing mode



NSF Certified


Comes with UL/CSA-listed wall plug-in power supply and internal rechargeable battery pack



DETECTO's PS7 digital portion scale can be used wherever food is weighed, portioned, or dispensed. The PS7 offers five different units of measure and you can disable different units of measure if they are not needed. The display is angled upward for easy viewing. The display backlight will be turned on during weighing and will automatically turn off 5 seconds after the weight has been removed from the scale.

MODEL	PS7
<b>Capacity</b>	7 lb x 0.1 oz, 112 oz x 0.1 oz, 112 oz x 1/8 oz, 3000 g x 1 g, 7 lb x 0.005 lb
<b>Overall Dimensions</b>	8.03 in W x 7.87 in D x 2.44 in H / 204 mm W x 200 mm D x 62 mm H
<b>Platform Size</b>	8.02 in W x 4.96 in D / 204 mm W x 126 mm D
<b>Construction</b>	ABS plastic enclosure with stainless steel platform cover
<b>Weight Display</b>	1.0 in / 25 mm high backlit LCD, 5 digit with fraction
<b>Zero</b>	Established on power up routine and maintained by auto-zero circuitry
<b>Power</b>	115 VAC 50/60Hz or 230 VAC 50/60 Hz powering a 15 VDC 300 mA wall plug-in UL/CSA listed power supply (included) or one internal rechargeable battery pack (included)
<b>Battery Life</b>	20 hours of continuous use with fully charged battery pack
<b>Tare (Zero)</b>	100% of scale capacity
<b>Temperature</b>	40° to 105°F / 5° to 40°C
<b>Humidity</b>	25% ~95% RH
<b>Features</b>	Low battery indicator, power saving selectable timing, auto shut-off
<b>Keys</b>	ON/OFF, MODE/OK, UNIT/▶, TARE/✱/▲
<b>Certification</b>	NSF approved
<b>Shipping Weight</b>	4 lb / 1.8 kg
<b>UPC Code</b>	809161128307

The scale's Tare feature lets you tare/zero the weight of a container up to the full capacity of the scale. By using the checkweighing feature, you can select under and over weight limits for quickly checking food portion weights. The LCD will turn red for over weights, green for acceptable weights, and the backlit will turn off for under weights. The PS7 comes in attractive retail packaging.

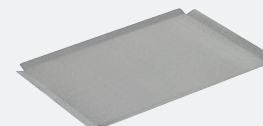

### Optional ET7 Extended Tray

Built specifically for the PS7 to extend the tray size to 9.5 in W x 6.8 in D / 24 cm W x 17 cm D

DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.

**SOLD BY:**



102 East Daugherty St., Webb City, MO 64870 USA  
Toll-Free: (800) 641-2008 E-mail: detecto@cardet.com  
www.Detecto.com