

# DETECTO®

## WIRELESS INGREDIENT SCALES

# PZ SERIES




NSF Certified



DETECTO  
model PZ60W  
wireless ingredient scale




- Wireless Connection Between Scale Base and Indicator
- Wave-a-Weigh Hands-Free Tare
- Stainless Steel Platform for Easy Clean-ups
- Uses Off-the-Shelf AA Batteries (not included)
- Wall-Mounting Bracket for Indicator

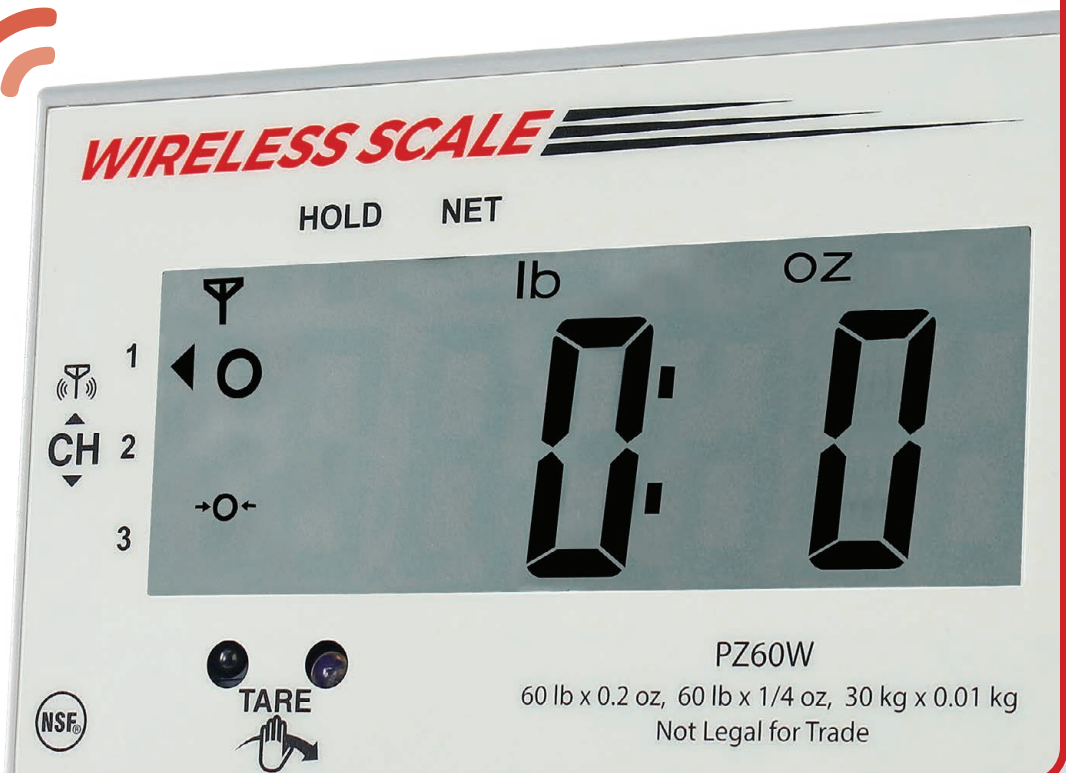

### WIRELESS SCALE

HOLD NET

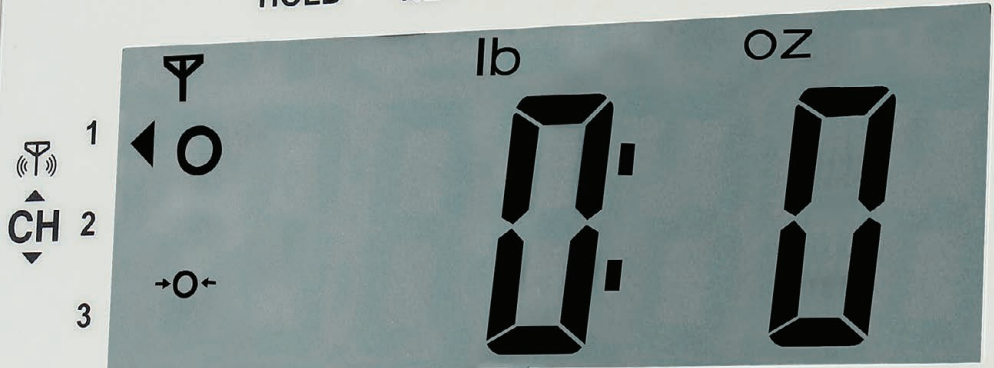


PZ60W

60 lb x 0.2 oz, 60 lb x 1/4 oz, 30 kg x 0.01 kg  
Not Legal for Trade

## WIRELESS DISPLAY PORTION SCALES

POSITION THE DIGITAL DISPLAY WHEREVER IT'S THE MOST CONVENIENT FOR YOU.

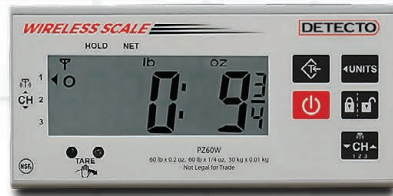


DETECTO's PZ30W and PZ60W wireless ingredient scales provide remote readouts without any cables or wires ever getting in the way. The scale base and display both operate on AA batteries (not included) and each comes with its own AC adapter (included). The HOLD feature allows you to retain the weight of the product even after it's removed from the scale.

- 30 lb and 60 lb capacities available
- 14 in x 14 in stainless steel platform
- Large 1-inch-high LCD readouts
- Quick response time
- NSF certification
- Units switching between the most common units of measure
- Pushbutton and hands-free tare



### 3 CHANNELS TO SELECT FROM AND AVOID WIRELESS INTERFERENCE

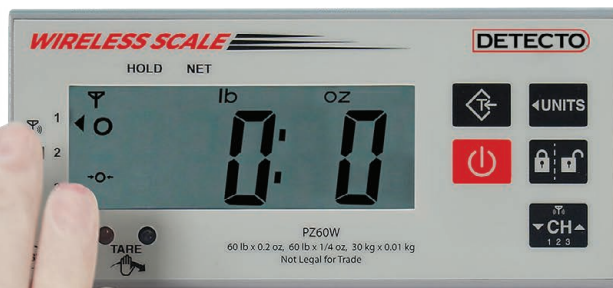

### HANDS-FREE TARE

The PZ series features Wave-a-Weigh hands-free tare to remove the tare weight without ever pushing a key. This exciting feature allows quicker and cleaner food prep in a busy commercial kitchen via the photo eye for touch-free tare functionality.



### STAINLESS STEEL QUALITY

Stainless steel scale platform for long-lasting durability and easy clean-up after messy food prep.

## DETECTO Models PZ30W/PZ60W

### WIRELESS INGREDIENT SCALES

#### CUT THE CORD ON THE TIES THAT BIND

If you are always wrestling with display cords and power supplies that get in the way on your food prep table, then DETECTO's PZ series scales are for you! You have nearly unlimited mounting options for the versatile remote display, and you can place the scale base anywhere, since they are connected wirelessly.

This provides you with the ultimate in freedom for setting up your prep station for portioning, batching, and general food weighing. You can build your food product directly on the scale using the helpful hands-free tare photo eye to measure each step of the process.




Since 1900, DETECTO's brand name has stood for dependable weighing accuracy for many years to come.



### MOUNTING BRACKET

The display can be easily positioned wherever it's best viewed for your food prep operation, regardless of the constraints inherent in a scale with cable. You can lay the display on a tabletop for portable use or mount it permanently against a flat wall. The display comes with a built-in mounting bracket on the back for easy wall-mounted installation (two screws and mounting anchors included).

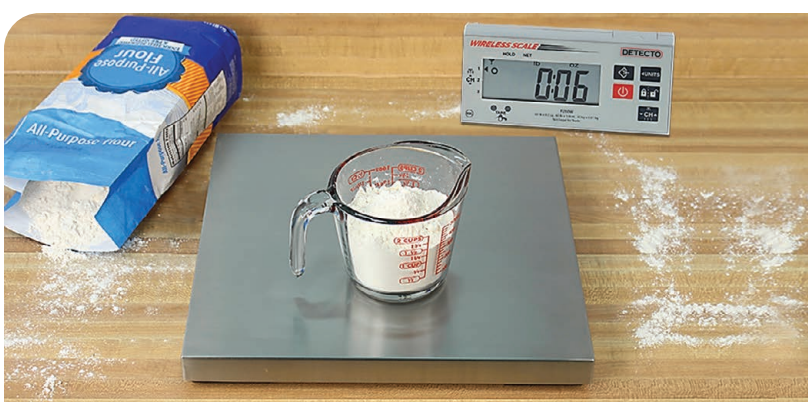


### FLEXIBILITY

The wireless display gives you the freedom to place it in a location that is most easily accessible for use.

# PZ SERIES



PZ30W

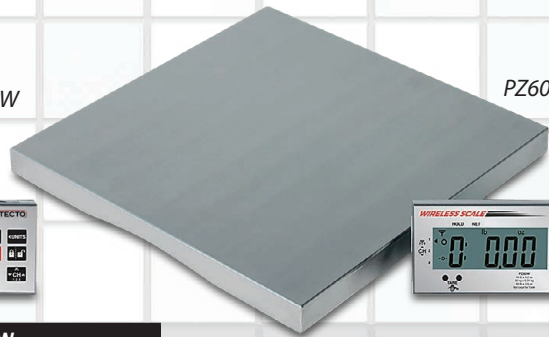

PZ60W

Models	PZ30W	PZ60W
<b>Capacity</b>	0-10 lb x 0.05 oz / 10-30 lb x 0.1 oz 0-5 kg x 0.002 kg / 5-15 kg x 0.005 kg 30 lb x 1/8 oz	60 lb x 0.2 oz 60 lb x 1/4 oz 30 kg x 0.01 kg
<b>Weight Unit</b>	lb: oz (decimals); lb: oz (fractions); kg	
<b>Weight Display</b>	1" LCD readout	
<b>Display Dimensions</b>	6.6 in W x 3 in D x 1.8 in H / 16.8 cm W x 7.6 in D x 4.6 in H	
<b>Scale Base Dimensions</b>	14 in W x 14 in D x 1.6 in H / 35.6 cm W x 35.6 cm D x 4.1 cm H	
<b>Buttons</b>	ON/OFF, HOLD, Tare, Units, Channel	
<b>Power Requirements</b>	10-AA batteries, (6) for scale base, (4) for Display (not included) or (2) 15V AC Adapters (included), one each for scale base and display	
<b>Operation Temperature</b>	32 to 104°F (0 to 40°C)	
<b>Certifications</b>	NSF	
<b>Product Net Weight</b>	7 lb / 3.2 kg	
<b>Shipping Weight</b>	8 lb / 3.9 kg	
<b>UPC Codes</b>	809161203509	809161203608

### AC or BATTERY POWER

The PZ30W and PZ60W come with everything necessary to get you up and weighing right away, including AC adapters for both the scale base and the display. The PZ series runs on standard off-the-shelf AA batteries (not included).



## WIRELESS INGREDIENT SCALES



DETECTO reserves the right to improve, enhance, or modify features and specifications without prior notice.

**SOLD BY:**



102 East Daugherty St., Webb City, MO 64870 USA  
Toll-Free: (800) 641-2008 E-mail: detecto@cardet.com  
www.Detecto.com