



HANGING DIAL SCALES

T3530/T3530KG

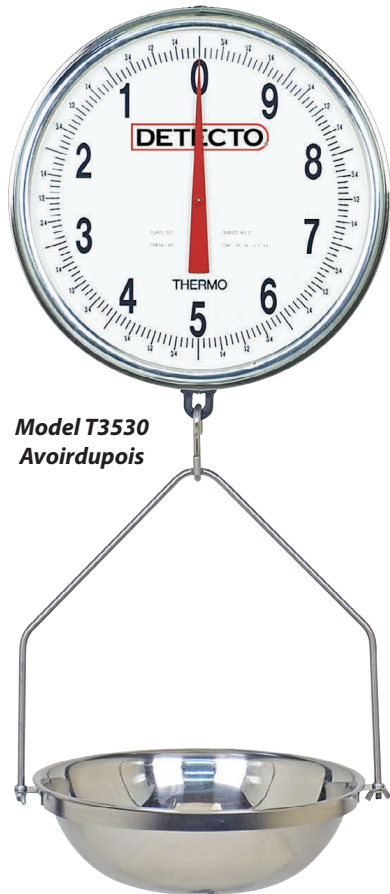

Model T3530
Avoirdupois

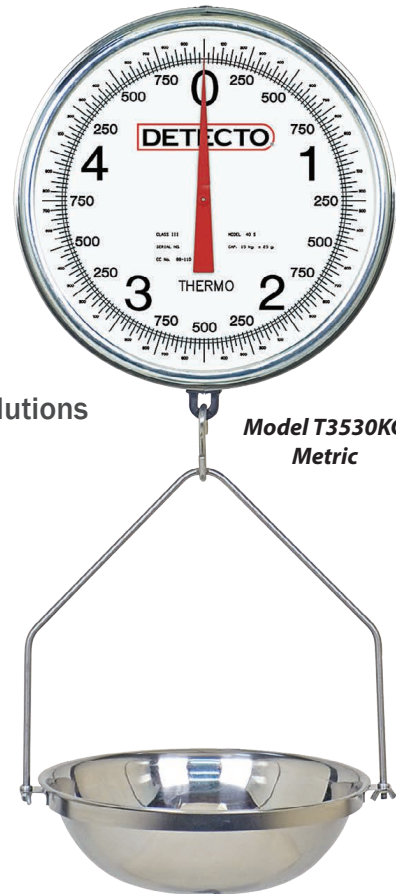

Model T3530KG
Metric

- Extra-Large 14.5-in/37-cm Dial
- Readable From Both Sides
- Reaches Full Capacity in 3 Revolutions
- Avoirdupois and Metric Models
- Includes Stainless Steel Bowl
- Legal for Trade



LEGAL FOR TRADE

Certificate of Conformance
No. 88-110



Model T3530	
Capacity:	32 lb
Dial Chart:	10 lb x 1 oz
Revolutions:	3.2
UPC Code:	809161111903

Model T3530KG	
Capacity:	15 kg
Dial Chart:	5 kg x 25 g
Revolutions:	3
UPC Code:	8091611190809

Dial Size Diameter:	14.5 in / 37 cm
Scale Construction:	Stainless steel with glass dial cover
Bowl Construction:	Stainless steel
Bowl Size:	13.5 in / 34 cm diameter with (3) 0.25 in / 6 mm holes in the bottom
Shipping Weight:	33 lb / 15 kg

DETECTO's T3530 series hanging dial scales feature a deep 13.5-in/34-cm diameter removable stainless steel bowl with drain holes, making them ideal for foodservice or medical weighing use. Thermolastic springs, unaffected by extreme temperature variations, guarantee long-term accuracy while an air dash pot absorbs shock when loads are dropped on the scale protecting the mechanism and increasing the scale life.

Your Authorized DETECTO Dealer:



102 East Daugherty St., Webb City, MO 64870 USA
Toll-Free: (800) 641-2008 E-mail: detecto@cardet.com
www.Detecto.com