

# DETECTO®

## Top Loading Dial **SCALES**

featuring  
Air Dashpots




***Air Dashpots Reduce  
Pointer Bounce for  
Instant Readings***

*DETECTO model  
T-5-D with air dashpot*

## **Consistent Portion Control | T-D Series**

- ✓ Available in 5-lb and 2-lb Capacities
- ✓ 8-inch (20-cm) Diameter Fixed Dial
- ✓ Durable White Baked Enamel Finish
- ✓ Roomy Stainless Steel Platform
- ✓ Air Dashpot Shock Absorber
- ✓ Temperature-Compensated Springs

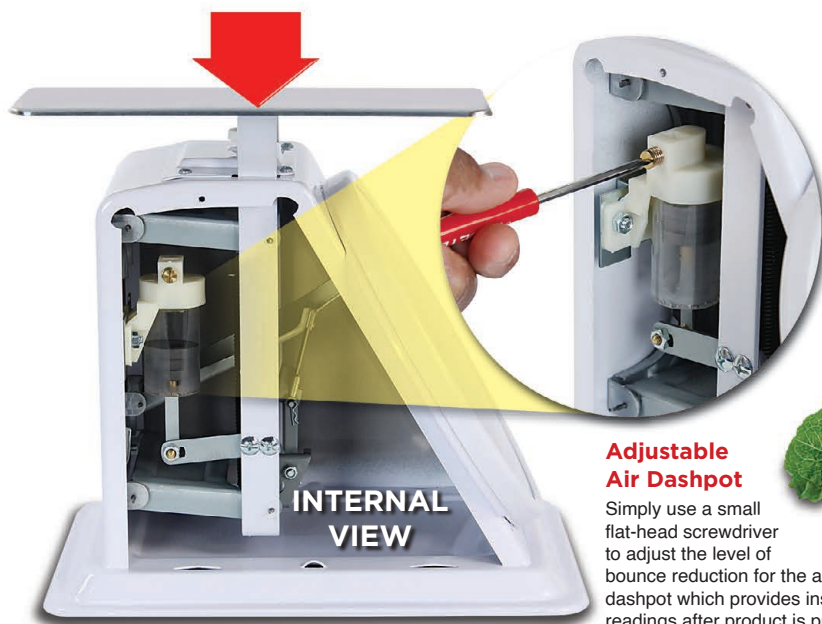

**INTERNAL VIEW**

**Adjustable Air Dashpot**

Simply use a small flat-head screwdriver to adjust the level of bounce reduction for the air dashpot which provides instant readings after product is put on the scale.



Fine point indicator for high accuracy

## Mechanical Dial Scales for High-Volume Weighing

DETECTO's durable top loading dial scales feature temperature-compensated springs which are maintenance free and the scales don't require electricity, so they can be used anywhere. The phosphate-plated internal steel parts and 8.75-inch x 8.75-inch (22-cm x 22-cm) stainless steel platform resist corrosion. The convenient dial viewing angle and air dashpot provide instant weight readouts that are easily visible. The air dashpot is ideal for fast, high-volume weighing applications and reduces oscillation of the indicator pointer.



MODEL	T-2-D	T-5-D
Capacity	32 oz x 1/8 oz	5 lb x 1/2 oz
Platform Size	8.75 in x 8.75 in / 22 cm x 22 cm	
Platform Construction	Stainless steel	
Overall Construction	White baked enamel external finish and phosphate-plated internal steel parts	
Dial	8 in / 20 cm diameter fixed dial	
Overall Dimensions	8.75 in W x 10.5 in D x 10.5 in H / 22 cm W x 27 cm D x 27 cm H	
Air Dashpot	Yes, with adjustment screw (reduces indicator needle oscillation for faster readings)	
Operating Temperature	14°F to 104°F / -10°C to 40°C	
UPC Code	809161193503	809161193602
Shipping Weight	8 lb / 4 kg	

*Detecto Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.*



102 East Daugherty St., Webb City, MO 64870 USA  
 Toll-Free: (800) 641-2008 E-mail: [detecto@cardet.com](mailto:detecto@cardet.com)  
[www.Detecto.com](http://www.Detecto.com)

**SOLD BY:**